

E551 – ENERGY M+ USER MANUAL



CONTENTS

IMPORTANT INFORMATION	12
SAFETY PRECAUTIONS FOR PROPER GROUNDING	
INSTALLATION	14
SAFETY PRECAUTIONS FOR PROPER SUPPLY UNIT	14
SAFETY PRECAUTION FOR DIRECT SUNLIGHT	15
PRECAUTION OF HEARING LOSS	16
SAFETY IN AIRCRAFT	16
EXPLOSIVE ATMOSPHERES	16
ROAD SAFETY	17
SAFETY PRECAUTIONS FOR RADIO FREQUENCY EXPOSURE	17
INTERFERENCES WITH MEDICAL EQUIPMENT FUNCTIONS	17
HEARING AID DEVICES	17
NON-IONIZING RADIATION	18
AVOID APPLYING EXCESSIVE PRESSURE TO THE DEVICE ..	19
DEVICE IS GETTING WARM AFTER PROLONGED USE	19
HEED SERVICE MARKING	19
DAMAGE REQUIRING SERVICE	19
AVOID HOT AREAS	19
AVOID WET AREAS	20
AVOID USING YOUR DEVICE AFTER A DRAMATIC CHANGE IN TEMPERATURE	20
AVOID PUSHING OBJECTS INTO THE DEVICE	20
MOUNTING ACCESSORIES	20
AVOID UNSTABLE MOUNTING	20
USE PRODUCT WITH APPROVED EQUIPMENT	20
ADJUST THE VOLUME	20
CLEANING	21
HERZSCHRITTMACHER	21
GET TO KNOW YOUR PHONE	22

ABOUT ANDROID™	22
BOX CONTENT	22
PHONE COMPONENTS.....	23
INSTALLING SIM CARD AND SD CARD.....	23
REMOVE BATTERY COVER	23
REINSTALL BACK COVER	24
SIM CARD	24
BATTERY.....	24
REMOVE SIM CARD	25
CHARGING THE BATTERY.....	26
OPTIMIZATION OF BATTERY POWER	26
BUTTONS ON FRONT PANEL	26
FUNCTIONS	26
USING THE TOUCHSCREEN.....	27
TAP	27
TAP AND HOLD.....	27
SWIPE OR SLIDE	27
DRAG	27
FLICK.....	27
ROTATE.....	27
PINCH.....	28
SENSORS.....	28
START GUIDE	28
TURN ON PHONE	28
TURN OFF PHONE	28
ENTERING THE PIN (IF APPLICABLE).....	29
AUTOMATIC SCREEN OFF	29
UNLOCK SCREEN	29
HOME SCREEN	29
EXTEND HOME SCREEN.....	29
MOVE ITEMS ON HOME SCREEN.....	29
DELETE ITEMS FROM HOME SCREEN.....	30

CHANGE THE WALLPAPER.....	30
ORGANIZE ITEMS IN FOLDERS / ADD NEW ICONS	30
RENAME FOLDERS	30
APPLICATION SCREEN	30
LINKTO HOME SCREEN	30
WIDGETS	31
STATUS AND NOTIFICATION	31
NOTIFICATIONS (STATUS BAR).....	31
STATUS ICONS	31
ICONS.....	31
DEFINITION	31
ICONS.....	31
DEFINITION	31
OPEN NOTIFICATION PANEL.....	32
CLOSE NOTIFICATION PANEL.....	32
HANDLE SETTINGS WITH THE NOTIFICATION PANEL	32
USE SD CARD AS USB DISK DRIVE	32
SET UP SD CARD AS USB DISK DRIVE.....	33
OPTIMIZE PHONE MEMORY.....	33
MANAGE PHONE	35
PHONE SETTINGS	35
MANAGE THE BASE SETTINGS	36
ADJUST DATE AND TIME.....	36
CALL SETTINGS.....	37
SET UP VOLUME.....	38
USE THE DISPLAY.....	38
SET UP LANGUAGE	38
PROTECTE PHONE	39
SET UP PIN CODE	39
LOCK YOUR SCREEN.....	39
MANAGE MEMORY.....	40
MANAGE AND CLEAR INSTALLED APPS	40

SYSTEM UPDATES.....	40	MUTE PHONE DURING A CALL.....	49
UPDATE WITH CAUTION.....	41	PUT A CALL ON HOLD.....	49
SOFTWARE UPDATE.....	41	END A CALL.....	49
WIRELESS SYSTEM UPDATED.....	41	TO USE CALL HISTORY.....	49
SYSTEM UPDATE VIA USB CABLE.....	41	USE THE CALL HISTORY.....	50
BACKUP OF DATA.....	42	CLEAR THE CALL HISTORY.....	50
FACTORY DATA RESET.....	43	MULTIPLE CALLS.....	50
RESETTING THE PHONE.....	43	ACTIVATE CALL WAITING SERVICE.....	50
ENTERING TEXT.....	44	ANSWER FURTHER CALL / CURRENT CALL ON HOLD.....	51
OVERVIEW KEYBOARD.....	44	MAKE A FURHTER CALL.....	51
OVERVIEW.....	44	SWITCH BETWEEN DIFFERENT CALLS.....	51
BASIC EDITING OPTIONS.....	44	END CURRENT CALL / RETURN TO THE CALL ON HOLD...51	
USE PROPOSED NEXT WORD.....	45	CONFERENCE CALL.....	51
USING TOUCH KEYBOARD.....	45	START A CONFERENCE CALL.....	51
SELECT KEYBOARD.....	45	REMOVE PARTICIPANTS FROM CONFERENCE CALL.....	52
SWITCH LANGUAGE WHILE TYPING.....	45	PRIVATE CONVERSTATION WITH A CONFERENCE CALL	
USE LANDSCAPE KEYBOARD.....	46	PARTICIPANT.....	52
ENTER NUMBERS AND SYMBOLS.....	46	END A CONFERENCE CALL.....	52
WORKING WITH DICTIONARIES.....	46	TO ADJUST CALL SETTINGS.....	52
CALL MANAGEMENT.....	47	SWITCH ON / OFF PHONE FUNCTIONS.....	53
MAKE PHONE CALLS.....	47	ENABLE / DISABLE AIRPLANE MODE.....	53
MAKE A CALL BY DIALING A PHONE NUMBER.....	47	CONTACTS.....	54
MAKE A CALL BY USING THE CONTACTS.....	47	TRANSFER CONTACT INFORMATION.....	54
MAKE A CALL BY USING THE CALL HISTORY.....	47	BY USING GOOGLE™.....	54
USE THE PHONE NUMBER IN A TEXT MESSAGE.....	47	USE A SIM CARD.....	54
CALL FOR EMERGENCY ASSISTENCE.....	47	BY USING A SD CARD.....	55
ACCEPT OR REJECT AN INCOMING CALL.....	48	BY USING BLUETOOTH™.....	55
ACCEPT AN INCOMING CALL.....	48	MANAGE CONTACTS.....	55
REJECT AN INCOMING CALL.....	48	OVERVIEW CONTACT APP.....	55
MUTE YOUR RINGTONE.....	48	MANAGE CONTACTS.....	56
USECALL OPTIONS.....	48	FAVORITES.....	57
SWITCH ON / OFF SPEAKER DURING A CALL.....	49	GROUPS.....	58

SEARCH CONTACTS	58
TRANSFER CONTACTS	58
BACKUP CONTACTS.....	59
MESSAGING	60
USE SMS AND MMS	60
COMPOSE AND SEND MESSAGES.....	60
SAVE MESSAGES AS DRAFT	60
SHOW MESSAGES	61
ANSWER MESSAGES	61
FORWARD MESSAGES	61
DELETE MESSAGES.....	61
MESSAGING SETTINGS.....	61
E-MAIL	64
MANAGE YOUR EMAIL ACCOUNTS.....	64
SET UP AN EMAIL ACCOUNT	64
SET UP EMAIL ACCOUTN AS DEFAULT	64
TO ADD FURTHER EMAIL ACCOUNTS.....	64
TO DELETE EMAIL ACCOUNTS.....	64
USE EMAIL	65
COMPOSE AND SEND EMAIL	65
RECEIVE EMAILS.....	65
ADJUST FREQUENCY.....	66
SHOW EMAILS.....	66
ANSWER EMAILS.....	66
FORWARD EMAILS.....	66
DELETE EMAILS	66
SHOW FOLDER FOR YOUR EMAIL ACCOUNTS	66
WLAN	67
TURN ON WIRELESS FUNCTION AND CONNNECT TO WIRELESS NETWORK	67
SEARCH FOR WLAN NETWORK MANUALLY	67
WLAN NETWORK STATUS	68

ENABLE WLAN NETWORK NOTIFICATION	68
SHOW DETAILED INFORMATION ABOUT THE ASSIGNED WLAN NETWORK	68
DISCONNECT WLAN NETWORK	69
WLAN NETWORK IN STANDBY MODE.....	69
INTERNET BROWSER	70
USE INTERNET BROWSER	70
OPEN INTERNET BROWSER.....	70
ACCESS A WEB PAGE.....	70
SET AS HOMEPAGE	70
END BROWSER	70
BROWSER SETTING	71
CHANGE BROWSER SETTINGS	71
CHANGE TEXT SIZE ON WEBSITES	71
CLEAR CACHE, COOKIES, HISTORY	71
NAVIGATE THE BROWSER.....	71
ZOOM WEBSITE	71
SAVE WEBSITES FOR OFFLINE READING	71
SHOW SAVED WEBSITES	72
OPEN THE LIVE-VERSION OF AN OFFLINE WEBSITE	72
SHARE LINKS.....	72
WORK WITH SEVERAL WEBSITES.....	72
OPEN NEW BROWSER WINDOW	72
SWITCH BETWEEN WEBSITES	72
CLOSE A WEBSITE	73
MANAGE BOOKMARKS.....	73
BOOKMARK A WEBSITES.....	73
OPEN BOOKMARKS	73
EDIT BOOKMARKS	73
DELETE BOOKMARKS.....	73
ADD BOOKMARKS TO HOMESCREEN.....	74
MANAGE TEXT AND PICTURES.....	74

SEARCH TEXT ON A WEBSITE	74	EDIT PHOTO	82
COPY TEXT	74	OVERVIEW PHOTO EDITING	82
SAVE PICTURE	74	ROTATE PHOTO	82
DOWNLOAD PATH SETTINGS	74	CROPPING PHOTO	82
ADVANCED BROWSER SETTINGS	75	SET PICTURE AS	83
ACTIVATE PLUG-INS	75	CAMERA SETTINGS VIDEO MODE	83
AUTO-FITS PAGES	75	CAMERA SETTINGS	83
POP-UPS	75	SET COLOR EFFECT	83
BLUETOOTH™ SETTINGS	76	SET RECORDING MODE	83
TURN ON BLUETOOTH™ AND MAKE YOUR DEVICE VISIBLE	76	SET FLASH MODE	84
FURTHER BLUETOOTH™ SETTINGS	76	GALLERY	85
PAIRING WITH OTHER DEVICES	77	SHOW / PLAY ITEMS	85
PAIR DEVICES	77	WORKING WITH PHOTOS	86
UNPAIR DEVICES	77	WORKING WITH VIDEOS	87
SEND AND RECEIVE FILES	77	MULTIMEDIA	89
SEND FILES VIA BLUETOOTH	78	MUSIC APP	89
SHOW RECEIVED ITEMS	78	FUNCTIONS	89
CAMERA	79	PLAY MUSIC	90
TO TAKE PHOTOS AND VIDEOS	79	MANAGE PLAYLISTS	91
CAMERA FUNCTIONS	79	USE AS YOUR RINGTONE	91
OPEN CAMERA APP	79	COPY MUSIC TO SD CARD	91
CLOSE CAMERA APP	79	CLOSE MUSIC APP	92
TAKE PHOTO	80	RADIO APP	92
TAKE VIDEO	80	FUNCTIONS	92
TAKE A SELFIE	80	START RADIO APP	92
VIEW PHOTOS OR VIDEOS	80	SWITCH BETWEEN THE STATIONS	93
DELETE PHOTOS OR VIDEOS	80	SELECT RADIO RANGE	93
CAMERA SETTINGS PHOTO MODE	80	SET UP FAVORITES	93
CAMERA SETTINGS	81	EDIT FAVORITES	93
SET COLOR EFFECT	81	MONO AND STEREO PLAYBACK	93
SET SHOT MODE	81	VIDEO PLAYER	94
SET FLASH	81	PLAY VIDEOS	94

SHARE VIDEO	94
DELETE VIDEO	94
OTHER APPLICATIONS	95
CALENDAR	95
SET CALENDAR VIEW	95
SHOW SEVERAL CALENDARS.....	95
CREATE EVENT.....	95
VIEW AND EDIT EVENT	95
CHANGE CALENDAR SETTINGS	95
CLOCK	96
ALARM CLOCK.....	96
STOP WATCH	97
COUNTDOWN	97
SOUND RECORDER.....	98
FUNCTIONS	98
RECORDING	98
CALCULATOR.....	98
USE CALCULATOR.....	98
CLOSE CALCULATOR.....	99
TROUBLESHOOTING	100

IMPORTANT INFORMATION



NOTICE: *The battery is not charged when you take it out of the box. Do not remove the battery pack when the device is charging. Your warranty is invalidated if you disassemble or change the device shell. The warranty for this product is void by opening or disassembling the device's case).*

LEGAL INFORMATION ABOUT INTELLECTUAL PROPERTY

All company, product and service names mentioned here are trademarks, registered trademarks or service marks of their respective owners. Shanghai Feixun Communication Co., Ltd. reserves the right to revise the content of this document at any time without prior notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photo-copying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of Shanghai Feixun Communication Co., Ltd.

DISCLAIMER

Any pre-installed software or data provided as a bundle to this device is subjected to the applicable law under the responsibility of the issuing software/service provider. The hardware manufacturer cannot be held liable for any breach, malfunction or other occurrence raised by using this third-party software. Only the issuing providers can lawfully be held responsible. Shanghai Feixun Communication Co., Ltd. does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Shanghai Feixun Communication Co., Ltd. will not provide any warranty of any kind for these third-party software and applications. Neither will Shanghai Feixun Communication Co., Ltd. provide support to customers who use these third-party software and applications nor be responsible or liable for the functions of these third-party software and applications. Third-party software and applications services may be interrupted or terminated at any time. Shanghai Feixun Communication Co., Ltd. does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the

control of Shanghai Feixun Communication Co., Ltd. To the greatest extent permitted by applicable law, it is explicitly stated that Shanghai Feixun Communication Co., Ltd. shall not compensate or be liable for services provided by third-party service providers or the interruption or termination of third-party contents or services.

Shanghai Feixun Communication Co., Ltd. shall not be responsible for the legality, quality or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works, such as texts, images, videos or software. Customers shall bear the risk for any and all effects including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product uses the open-source Android platform. Shanghai Feixun Communication Co., Ltd. has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Shanghai Feixun Communication Co., Ltd. shall not be liable for any of such situation.

LIMITATION OF DAMAGES

To the maximum extent permitted by applicable law, in no event shall Shanghai Feixun Communication Co., Ltd. be liable for any special incidental, indirect, or consequential damages or lost profits, business, revenue, data, goodwill or anticipated savings. The maximum liability (this limitation shall not apply to liability for personal injury to the extent applicable law prohibits such a limitation) of Shanghai Feixun Communication Co., Ltd. arising from the use of the product described in this document shall be limited to the amount paid by customers for the purchase of this product.

IMPORTANT HEALTH INFORMATION AND SAFETY PRECAUTIONS

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages. Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of body injury, electric shock, fire, and damage to the equipment, observes the following precautions.

SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

CAUTION: Connecting to a weaker inappropriate charger can result in an electric shock to the device.



This product is equipped with a USB cable for connecting with desktop or notebook computers. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

SAFETY PRECAUTIONS FOR PROPER SUPPLY UNIT

Use the correct power source

This product can only be charged with matching battery, standard external power source or battery, external power source appointed by Shanghai Feixun Communication Co., Ltd. Shanghai Feixun Communication Co., Ltd. is not liable for any device breakdown or safety accident caused by using any unauthorized battery or external power source.

Handle power packs carefully

The product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts or circuits, or expose a battery pack to temperatures higher than 60°C (140°F), or pose of in fire.

WARNING: Danger of explosion if battery is incorrectly replaced. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with the product.



Instructions for battery disposal

1. If the battery of the product is marked with this symbol they  are subject to the European Directive 2006/66/EC.
2. Batteries must always be separated from household waste and disposed according to applicable regulations.
3. By ensuring correct disposal of your old batteries harmful effects on humans, animals and the environment can be avoided.
4. For detailed information about disposal of used batteries, please contact your local office, waste disposal service or the shop where you purchased the product.

Take extra precaution

- ◆ Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- ◆ Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- ◆ Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.
- ◆ Consult the doctor immediately if the battery is swallowed.

If the battery leaks

- ◆ Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
- ◆ Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
- ◆ Take extra precautions to keep a leaking battery away from

SAFETY PRECAUTION FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. The device is designed to be operated in temperatures between 0°C and 33°C (32°F to 91.4°F). Low- or high- temperature conditions might temporarily shorten battery life or cause the device to temporarily stop working properly. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to

direct sunlight or strong ultraviolet light for extended periods of time. Avoid dramatic changes in temperature or humidity when using the device as condensation may form on or within the device.

When you are using the device or charging the battery, it is normal for device to get warm. The exterior of the device functions as a cooling surface that transfers heat from inside the unit to the cooler air outside.

PRECAUTION OF HEARING LOSS

CAUTION: To prevent possible hearing damage, do not listen at high volume levels for long periods.



Permanent hearing loss may occur if the receiver, headphones, speakerphone, or earpieces are used at high volume. Use only compatible receivers, headphones, speakerphones or earpieces with your device. Turn on the audio and check the volume before inserting anything into ears. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before the hearing could be affected. Suggestions to protect the hearing:

- ◆ Limit the amount of time to use the receiver, headphones, speakerphone, or earpieces at high volume.
- ◆ Avoid turning up the volume to block out noisy surroundings.
- ◆ Turn the volume down if you can't hear people speaking near you.

SAFETY IN AIRCRAFT

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device on board an airplane is against the law in most countries. Please comply with all regulations specified by airlines and turn off the phone or switch to Airplane Mode.

EXPLOSIVE ATMOSPHERES

In any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in body injury or

even death. Users are advised not to use the equipment at refueling areas such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as dust, or metal powders.

Please be aware that sparks in such areas may cause an explosion or fire resulting in body injury or even death.

ROAD SAFETY

Vehicle drivers in motion are not permitted to use phone services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed. Please inform yourself before driving about the legal requirements.

SAFETY PRECAUTIONS FOR RADIO FREQUENCY EXPOSURE

- ◆ Avoid using your phone near metal structures (for example, the steel frame of a building).
- ◆ Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- ◆ Use only original manufacturer-approved accessories.
- ◆ Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCES WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so.

HEARING AID DEVICES

Some digital wireless phones may interfere with some hearing aid


devices. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

NON-IONIZING RADIATION

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in noncompliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

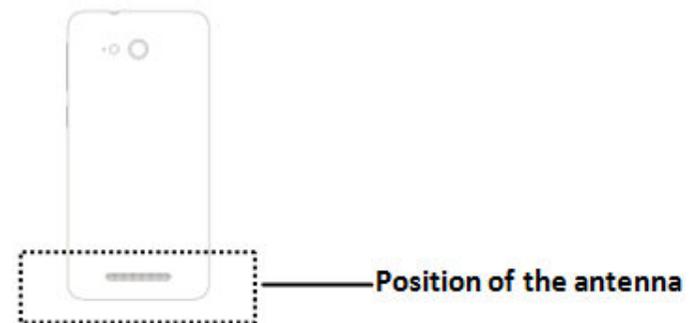

GENERAL PRECAUTIONS

AVOID APPLYING EXCESSIVE PRESSURE TO THE DEVICE

Do not apply excessive pressure on the screen and the device to prevent damaging them and causing cracked display of the touch screens. Do not put the device in your pants' pocket for a prolonged period of time.

DEVICE IS GETTING WARM AFTER PROLONGED USE

When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery or browsing the web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.

HEED SERVICE MARKING

Except as explained elsewhere in the Operating or Service documentation, do not repair any product yourself. Service needed on components inside the device should be done by an authorized service outlet or provider.

PHICOMM is entitled to use new or reconditioned replacements parts or boards for repairs under warranty, provided they have the same functionality as the parts to be replaced.

DAMAGE REQUIRING SERVICE

Unplug the product from the electrical outlet and refer servicing to an authorized service center or provider under the following conditions:

- ◆ Liquid has been spilled or an object has fallen onto the product.
- ◆ The product has been exposed to rain or water.
- ◆ There are noticeable signs of overheating.
- ◆ The product does not operate normally when you follow the operating instructions.

AVOID HOT AREAS

The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

AVOID WET AREAS

Never use the product in a wet location.

AVOID USING YOUR DEVICE AFTER A DRAMATIC CHANGE IN TEMPERATURE

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.



NOTICE: *When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.*

AVOID PUSHING OBJECTS INTO THE DEVICE

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

MOUNTING ACCESSORIES

Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

AVOID UNSTABLE MOUNTING

Do not place the product with an unstable base.

USE PRODUCT WITH APPROVED EQUIPMENT

This product should be used only with personal computers and options identified as suitable for use with your equipment.

ADJUST THE VOLUME

Turn down the volume before using head-phones or other audio devices.

CLEANING

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

The device has been provided with special treatments featuring that it could dispose dirt and sweat on its surface. The device itself does not have a stain-resistant function. In case of smudginess and dyeing, please wipe it with clean damp sponge immediately. Please keep the device dry when necessary.

HERZSCHRITTMACHER



The device may cause disturbance to pacemakers. Please keep the device a proper distance of at least 5 centimeters away from pacemakers. In no case should the device be put in the front pocket of your shirt or coat.



If you need detailed information about other active implantable medical devices, please consult your doctor to ensure the magnetic interference of such active implantable medical devices.

EC CONFORMITY

! Observe the national local regulations in the location where the device is to be used. This device may be registered for use in some or all member states of the European Union (EU).

! This device may be operated in all member states of the EU.

We fulfil the requirements of the R&TTE Directive (1999/5/EC).

Phicomm Smartphone E5515 / ENERGY M+

CE0168

GET TO KNOW YOUR PHONE

ABOUT ANDROID™

Phicomm smartphones are based on Android Software platform. Android™ is an operating system that was developed for mobile devices with touch controls (smartphones and tablets). You can customize your smartphone individually and delete, add or expand applications. Hundreds of thousands of applications are available via Google Play™ - you can choose from simple games to complex multimedia applications.

Android™ is continuously developed. Software updates from Google™ first have to be checked and then, if appropriate, be compatible, to fit your devices. Therefore a potential update is not available at the same time with a Google™ update.


On Phicomm device, some Google™ services are pre-installed. In order to optimize their benefits, it's better to have a Google™ account and sign up when first start Phicomm device.

BOX CONTENT

The phone packaging box should contain following items and accessories:

- ◆ Phone
- ◆ Battery
- ◆ Power Adapter
- ◆ Wired Stereo Headset
- ◆ USB sync cable
- ◆ Quick Start Guide
- ◆ Linux Kernel GPU License

PHONE COMPONENTS

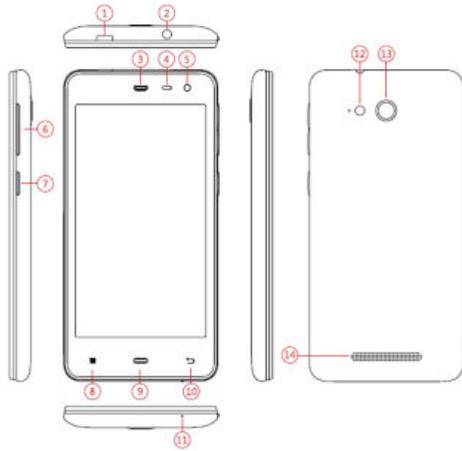

- | | |
|---------------------------|---------------------------|
| 1. Data Line Interface | 8. Menu Key |
| 2. Headset Socket | 9. Home Key |
| 3. Receiver | 10. Back Key |
| 4. Light Sensor | 11. Microphone |
| 5. Camera Lens (on front) | 12. Flash |
| 6. Volume Control Button | 13. Camera Lens (on back) |
| 7. Power Key | 14. Speaker |

INSTALLING SIM CARD AND SD CARD

Make sure to always turn off the power before installing or replacing the SIM card and MicroSD card. Also, remove the back cover before you can install the SIM card, battery and storage card before you can install the SIM card, battery and storage card.

REMOVE BATTERY COVER

1. Make sure your device is turned off.
2. Carefully hold the device with the front panel facing down.
3. Hold the lower half of back cover up with your fingers.
Remove it from the opening.



REINSTALL BACK COVER


1. First hold the upper half of the back. Fasten and align it on the device.
2. Slide the back cover into the slots provided.

SIM CARD

The SIM card includes your phone number, the service information, the phone book and the message storage.

Install SIM Card

1. Make sure your device is turned off.
2. Remove the back cover and battery.
3. With the SIM card's gold contacts facing down and its cut-off corner facing inside, insert the SIM card into the SIM card slot.

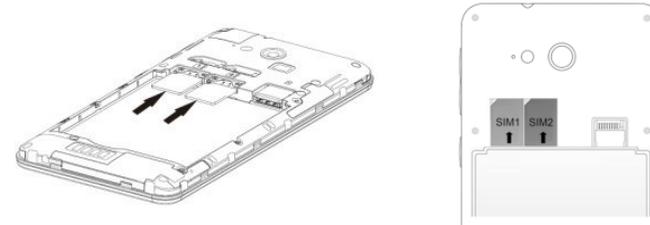

NOTICE: The phone is dual card dual-standby mobile phone; two SIM cards can be installed at the same time. The G card (GSM) can be installed in SIM2 slot only (right), and G card (GSM), W card (WCDMA) or 4G card (4G LTE) can be installed in SIM 1 slot (left) .


BATTERY

Your device is equipped with a rechargeable lithium-ion battery and is designed to use only manufacturer-approved batteries and accessories. Battery performance depends on many factors, including network configuration, the phone operating room temperature, selected and used functions and settings, patterns of use of sound, data and other applications. The new battery in the phone is only half charged. Please charge the battery fully before use.

Insert battery


1. Align the battery's exposed copper contacts with the battery connectors inside the battery compartment.

2. Insert the contact's side of the battery first and then gently push the battery into place.
3. Close the battery cover.

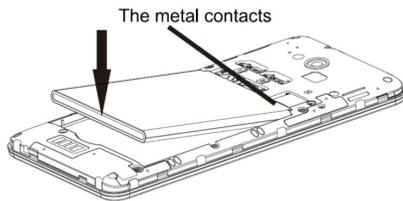

Remove battery

1. Make sure your device is turned off.
2. Remove the back cover.
3. Remove the battery from the small opening on bottom side of the battery compartment.

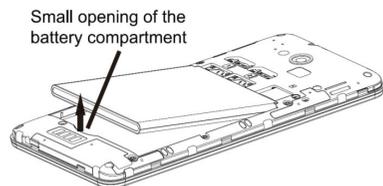


REMOVE SIM CARD

1. Make sure your device is turned off.
2. Remove the back cover and battery.
3. Take out the SIM card.

Install Micro SD Card

1. Make sure your device is turned off.
2. Remove the back cover and battery.
3. Insert the MicroSD card into the slot with its gold contacts facing down.

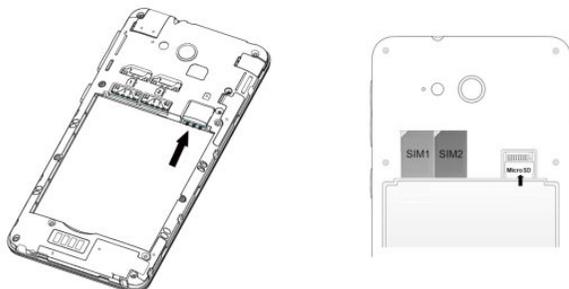

NOTICE: Both Nano card and Micro SD card can be installed into the right card slot, but just one at the same time.

CHARGING THE BATTERY

1. Connect the power adapter and the USB connector of the phone with the USB cable.
2. Plug in the power adapter to an electrical outlet to start charging the battery.



NOTICE: When charging the battery with the phone on, the charging battery icon  is displayed in phone's status bar. After the battery is fully charged, the charging battery icon turns to a full battery icon .

OPTIMIZATION OF BATTERY POWER


Use the following tips to improve your battery performance.

- ◆ Before first use charge your device 100%.
- ◆ Charge the device frequently.
- ◆ Disable all data connections over mobile network, if there is no internet access.
- ◆ Deactivate Bluetooth™ or WLAN if unnecessary.
- ◆ Extend the interval of the synchronization frequency (e.g. synchronization of e-mail, calendar and contacts).

BUTTONS ON PHONE PANEL

BUTTONS ON FRONT PANEL

The buttons on the front panel can perform the following operations:

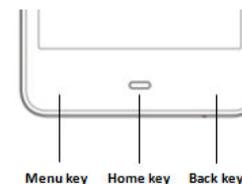

FUNCTIONS

- ◆ **Home Key:** Touch to return to the Home screen and open the

list of recent applications (press and hold).

- ◆ **Menu Key:** Touch to view a menu of options for the current screen or application.
- ◆ **Back Key:** Return to the previous screen or close dialogue box, notification or screen keyboard.

USING THE TOUCHSCREEN

Remove the protective film before using the phone.

Do not repair a damaged screen yourself, because this may cause damage that is not covered under the warranty.

TAP

To type using the keyboard, select items on screen such as applications or setting icon or press on screen buttons simply then tap them with your finger.

TAP AND HOLD

To open the available options for an item (for example a contact or link in a web page) simply press and hold the item.

SWIPE OR SLIDE

To swipe or slide means to quickly drag finger vertically or horizontally across the screen.

DRAG

Press and hold fingers with some pressure before starting to drag. While dragging do not release finger until reach the target position.

FLICK

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or messaging list.

ROTATE

For most screens you can automatically change the screen orientation from portrait to landscape by turning the phone

sideways. When entering text you can turn the phone sideways to bring up a bigger keyboard.



NOTICE: To automatically change the screen orientation you need checkbox *Auto-rotate screen*: Home screen > Menu key > **System Settings** > **Display**.

PINCH

In some apps, like gallery or the web browser “pinch” the screen using two fingers (for example, thumb and index finger) to zoom in or zoom out when viewing a picture or a web page.

Place two fingers on the screen and pull them together to zoom in and pull open to zoom out. The fingers must be in the zoom able line region (for example, within the photo frame).

SENSORS

Phicomm device has sensors for light and distance measurement. The screen brightness is adjusted according to the intensity of the ambient light. The proximity sensor turns the touch screen off when your ear is near the screen to prevent turning on other device functions accidentally.

START GUIDE

You can start using your phone after installing the SIM card and micro SD card.

TURN ON PHONE

The battery must be charged for at least 30 minutes before turning on the power for the first time.

Press and hold the power key for a few seconds.

TURN OFF PHONE

1. Press and hold the power key for a few seconds.
2. Tap **Power off**.
3. Confirm with **OK**.

ENTERING THE PIN (IF APPLICABLE)

If SIM card comes with a PIN (personal identification number), enter it and then tap **OK**. More detailed information, please read chapter "MANAGE PHONE" → Protect Phone.



NOTICE: If you enter the wrong PIN three times your SIM card will be locked. In such case, contact your carrier for the PUK (PIN unlocking key) to unlock your phone.

AUTOMATIC SCREEN OFF

When the phone is unused for a while, the screen will be automatically closed to save power. You can still receive messages and incoming calls when it's closed.

UNLOCK SCREEN

1. Press the power button.
2. Slide the screen upwards.

HOME SCREEN

The home screen provides a lot of free space to add new items. You can add new applications, shortcuts, folders or Google tools to quickly save messages and applications.

EXTEND HOME SCREEN

The home screen can be extended beyond the screen width to provide more space to add new icons or widgets. Tap home screen and slide finger to the left or to the right quickly. Up to five pages are available.

MOVE ITEMS ON HOME SCREEN

1. Press and hold the items to enable the editing mode.
2. Fix finger on the scene and drag the item directly to the desired location and release finger.



NOTICE: If you want to move the item from the home screen to the extended home screen, press and hold the item and drag it to the left or right. Then the scene will switch to the extended home screen, locate the item on the scene and release finger.

DELETE ITEMS FROM HOME SCREEN

1. Press and hold the item you would like to delete until the word **Remove** appears on the top of the screen.
2. Drag the item to the word **Remove**.
3. Release the item as soon as the color changed to red.

CHANGE THE WALLPAPER

1. Long press the home screen.
2. Select a wallpaper option.
3. Select wallpaper and confirm with **Set wallpaper**.

ORGANIZE ITEMS IN FOLDERS / ADD NEW ICONS

On the home screen arrange items into folders and add new apps-icons.

1. Press and hold on the item on the home screen to arrange in a folder.
2. Scroll it on top of another to arrange a folder with.
3. Release the icon. A new folder will be created automatically.



NOTICE: To delete the folder please follow the steps "DELETING ITEMS FROM HOME SCREEN".

RENAME FOLDERS

1. Tap on the folder to open it.
2. Tap on the folder name.
3. Insert a new name and confirm with **Done**.

APPLICATION SCREEN

The application screen can be open via home screen and includes pre-installed apps as well as the downloaded apps. The application screen extends beyond the regular screen width, so flick left and right.

Tap on  on the home screen.

LINK TO HOME SCREEN

1. Tap on  on the home screen.
2. Press and hold the app until the icon is highlighted. The home screen will open.
3. Move the app icon to a new position and release it.

WIDGETS

Widgets are small apps that can be used directly on the home screen.

To add a widget:

1. Tap on  on the home screen.
2. Tap on **Widgets**.
3. Press and hold the target widget until the icon is highlighted.
4. Move the widget to a new position.

STATUS AND NOTIFICATION

NOTIFICATIONS (STATUS BAR)

Notifications icons open to display when receiving new messages, set calendar events, clock or forwarded calls as well as current call status. Enable the notifications panel to get information about messages or calendar events and check the carrier's name.

Using the status bar to adjust the basic device settings, such as WLAN, Bluetooth™ or Mobile data.

STATUS ICONS


The following are some of the status icons in the status bar:

ICONS	DEFINITION	ICONS	DEFINITION
	Signal		WLAN connection
	SIM card missing		Bluetooth connection
	USB connection		Battery status
	Ring silent		Vibration
	Call incoming		Missing call
	New message		Airplane mode
	Data uploading		Data downloading
	New event		Synchronizing

	Music playing		Headset
	New mail		Keyboard enabled
	Stopwatch enabled		Alarm clock enabled
	Countdown enabled		Microphone off
	Speaker on		

OPEN NOTIFICATION PANEL

When new notification icon pops up in status bar, tap and hold the status bar and then slide finger down to open up the status bar (notification panel).

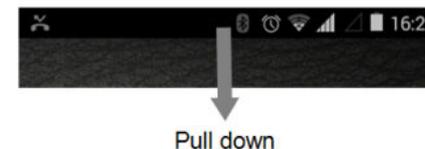

If there are many notifications just scroll down the screen to see more notifications.

CLOSE NOTIFICATION PANEL

Tap and hold the bottom of the notification panel and slide finger upwards on the screen .

HANDLE SETTINGS WITH THE NOTIFICATION PANEL

Using the status bar, you also can adjust the basic device settings, such as WLAN, Bluetooth™ or Mobile data.

1. Tap on the status bar and move downwards.
2. Tap on  .
3. Tap on the function you would like to adjust.
4. Tap on the **back key** or the **home key** to return to your homescreen.

USE SD CARD AS USB DISK DRIVE

Set storage card as USB disk drive if you want to transmit music, photos and other information to your phone storage card.

The device support Micro SD™ cards that also can be used in other compatible devices.

SET UP SD CARD AS USB DISK DRIVE

1. Connect the phone to the computer with a USB data cable.
2. Pull down the status bar.
3. Tap on **USB debugging connected**.
4. Tap **USB debugging** to activate it and confirm with **OK**.
5. Pull down the status bar again.
6. Tap on **Connected in / as ...**.
7. Select an option.

OPTIMIZE PHONE MEMORY

The phone memory is made up as follows:

- ◆ Internal memory: Random Access Memory (RAM)
- ◆ Internal drive space: Read Only Memory (ROM)
- ◆ SD-card: drive space

The RAM is usually very limited. It must be ensured that a sufficient amount of memory (RAM) is always available. Otherwise, the phone reacts very sluggish, applications can not boot or crash and cause new apps installation failure. Please note RAM can not be expanded.

The majority of the internal drive memory is already occupied by the operation system and pre-installed applications. These can't be removed without proper root privileges. Please note, warranty expires if the device was rooted self-employed.

The ROM can be expanded by using a SD card. Many applications can be installed directly to the SD card after download. However, each application will still store some data automatically on the ROM. Unfortunately, some applications can not be moved to the SD card as these do not work properly from there.

Here are some tips for setting your Phicomm smartphone to save storage space:

1. Apps that start automatically

Surely you use applications where it is desirable that these start immediately after switching on the phone. Other hand, numerous applications are preinstalled that you do not use. The

social network apps for example mostly use a huge part of ROM and RAM.

With app "Startup Manager" from Google Play™ you can assign any application easily whether it should start automatically or not. Please only deactivate the automatic start if you are sure of the mode of action. Otherwise, the function of your smartphone might be limited.

2. Monitor background processes

In most cases the background processes of the apps contribute to a decrease of performance. With the "Android Assistant" from Google™, monitor such processes and close unnecessary applications.

MANAGE PHONE

PHONE SETTINGS

Familiarize yourself with the following phone settings for a better handling.

WIRELESS & NETWORKS	
WLAN	Turn on / off WLAN, scan for available networks or add new WLAN network
Mobile data	Turn on / off Mobile data, enables the exchange of data over the internet via SIM card
Bluetooth	Turn on / off Bluetooth, scan for available Bluetooth devices and make your device visible for other users
Data usage	Shows information about your data usage.
More ...	Switch on / off airplane mode, add VPN network, Release mobile data as portable WLAN hotspot or Bluetooth tethering, manage mobile networks and enable data access, select cell broadcasts
DEVICE	
Dual SIM settings	Your phone does operate with dual SIM (standby). You can insert and install two SIM cards at the same time and modify your preferred SIM settings
Sound	Adjust the volume of Media, ringtones and other system notification tones
Display	Adjust the brightness, wallpaper Sleep function, auto-rotate screen and font size
Storage	Show the phone total storage and external storage space
Battery	Shows the battery status and usage of the different apps that are in use
Apps	Manage apps and change the preferred install location for new apps
PERSONAL	
Location	Access to my location (Google), GPS satellites location and WLAN & mobile network location
Security	Protect your phone by setting up different

	locks, adjust your device administration, make your password visible, encrypt your phone
Language & input	Adjust the language&spell checker, keyboard & input methods as well as speech and mouse / trackpad
Backup & reset	Back up your data and account and make a factory data reset
ACCOUNTS	
Add account	Add and adjust Email / Google account / Corporate account
SYSTEM	
Date & time	Adjust date & time, select time zone manually or set automatically, Select date and time format
Accessibility	Install accessibility services and activate and adjust system accessibilities
Printing	Enable wireless printing via your Google account
Developer options	Adjust developer options protect SD card, stay awake, desktop backup password and for debugging, input, drawing, hardware accelerated rendering, monitoring and apps
About phone	Information about your phone like battery status, legal information, model number, Software version, hardware version, RAM, system update and status

To open the phone setting tap on the homescreen on the menu key and select the **Settings**.

MANAGE THE BASE SETTINGS

Customize various device settings to satisfy your needs. For example, change the language, add a ringtone, or adjust the brightness of the screen.

ADJUST DATE AND TIME

Adjust the date and time either manually or use network provided information.

Set up date & time manually

1. Tap the **menu key** on the home screen.
2. Select **System settings > Date & time**.
3. Deactivate the check box **Automatic date & time** if activated.
4. Tap on **Set date** or **Set time**.
5. Scroll up or down to set the date, the hour and minute.
6. Confirm with **Done**.

Set up time zone

1. Tap the **menu key** on the homescreen.
2. Select **System settings > Date & time**.
3. Deactivate the check box **Automatic time zone**, if activated.
4. Tap on **Select time zone**.
5. Select a time zone.

CALL SETTINGS

Set up ringtone for incoming calls

1. Tap the **menu key** on the home screen.
2. Select **System settings > Sound > Phone ringtone**.
3. Select SIM Card you want to set the ringtone.
4. Tap on phone ringtone and select one.
5. Confirm with **OK**.



NOTICE: You can select different ringtones for the two SIM cards in order to distinguish.

Set up ringtone for incoming notifications / messages

1. Tap the **menu key** on the home screen.
2. Select **System settings > Sound**.
3. Tap on **Default notification sound**.
4. Select a sound / ringtone for the notification.
5. Confirm with **OK**.

Set up system tones

1. Tap the **menu key** on the home screen.
2. Select **System settings > Sound > System**.
3. Activate **Dial pad touch tones / Touch sounds / Screen lock sound / Vibrate on touch**.



NOTICE: To switch off tone vibration completely (also during text input), you have to switch of Vibrate on key

press in **Language & input > Android Keyboard (AOSP)** settings.

SET UP VOLUME

When playing music or video, press the VOLUME button (up or down) on the left panel to adjust the volume. A bar, which displays the volume will appear on the screen.

Change the media volume in the system settings as well:

1. Tap the **menu key** on the home screen.
2. Select **System settings > Sound > VOLUMES**.
3. Move the slider for the corresponding app to the left or right for volume up or down.
4. Tap on **OK** to close the window.

Set up vibration

1. Tap the **menu key** on the home screen.
2. Select **System settings > Sounds**.
3. Activate **Vibrate when ringing**. The phone vibrates now for incoming calls or when you tap on the touch pad.

USE THE DISPLAY

Adjust the brightness of the display

1. Tap the **menu key** on the home screen.
2. Select **System settings > Display > BRIGHTNESS**.
3. To decrease the brightness, drag the slider to the left and to increase the brightness, drag it to the right. The controller disappears after a few seconds by itself.



NOTICE: There are two ways to adjust the brightness: automatically or manually select. Enable Auto brightness when the screen is adapted to the energy consumption.

Set up the sleep mode

1. Tap the **menu key** on the home screen.
2. Select **System settings > Display > Sleep**.
3. Select an option.

SET UP LANGUAGE

You can change the default language and Select a different one and change it back later.

1. Tap the **menu key** on the homescreen.

2. Select **System settings > Language & input > Language**.
3. Select the language.

PROTECTE PHONE

SET UP PIN CODE

You can protect your phone with a PIN code to prevent a non-infringing use.

Activate your PIN

1. Tap the **menu key** on the home screen.
2. Select **System settings > Security**.
3. Tap on **Set up SIM/RUIM card lock**.
4. Activate the check box **Lock SIM card**. You can lock both SIM1 and SIM2. Just tap the corresponding SIM card.

Change your SIM PIN

1. Tap the **menu key** on the homescreen.
2. Select **System settings>Security**.
3. Tap on **Set up SIM/RUIM card lock**.
4. Tap on **Change SIM PIN**.
5. First enter the old PIN and confirm with **OK**.
6. Now enter the new PIN and confirm **OK**.

LOCK YOUR SCREEN

Protect personal data and information by creating a screen lock pattern, to prevent others use your phone.

Enable screen lock

Press the power button to lock display.

Set up a screen lock with PIN or password

1. Tap the **menu key** on the home screen.
2. Select **System settings > Security > Screen lock**.
3. Select **PIN** or **Password**.
4. When prompted, enter a password and confirm with **Next**.
5. Enter the password again and confirm with **OK**.

Set up and use a lock screen pattern

You can set up a lock pattern in order to improve the security of your phone. If you set up a pattern you will be asked to enter this lock screen pattern to unlock your screen.

1. Tap the **menu key** on the home screen.
2. Select **System settings > Security > Screen lock**.
3. Select **Pattern**.
4. Draw an unlock pattern. Connect points either vertically, horizontally or diagonally to adjust your screen lock pattern.



NOTICE: You must connect the dots pulling together. The pattern is finished once you release the points.



5. When prompted enter the pattern again and tap **Confirm**.



NOTICE: You can reset the use of the screen lock pattern any time if you do not want to continue using. If entered a wrong screen lock pattern five times in a row, you have to wait 30 seconds before you can enter it again.

MANAGE MEMORY

To see the available device memory

1. Tap the **menu key** on the homescreen.
2. Select **System settings > Storage**. You will see the Total space, System space and Internal space.

MANAGE AND CLEAR INSTALLED APPS

To enhance your space, you can delete apps or applications that you do not use on your device.

Delete application

1. Tap the **menu key** on the home screen.
2. Select **System settings > Apps**.
3. Select an application that you want to delete. You can delete applications that are currently being downloaded, that are currently running and those that are on your SD card.
4. Tap on **Uninstall** and confirm with **OK**.

SYSTEM UPDATES

Keep your device up to date to ensure an optimum performance and the latest enhancements available.

For this, use the preinstalled System Update App to perform a wireless update. You can update either via your mobile network (this may cause significant costs depending on your contract) or a wireless connection.

UPDATE WITH CAUTION

- ◆ Improper operation or unpredictable external factors may cause operating system update is not successful; the device will not work properly. When such situation occurs, the device need to be returned for repair.
- ◆ Unofficial operating software may cause security risks. Please only use official released Software Updates by Phicomm, otherwise the warranty and the right to claim under guarantee is invalid.

SOFTWARE UPDATE

- ◆ Users data will be erased during the update process, please backup data beforehand.
- ◆ Please make sure that the battery is charged above 30%.
- ◆ Do not unplug the battery or the SD card during the update process.

WIRELESS SYSTEM UPDATED

1. Backup your data.
2. Tap **System Update** on the homescreen on.
3. Tap on **Remote Updates**.The device now checks for updates. If updates are available, you will be informed about the updates in this new SW version. Now you can decide whether you want to install the update or not.
4. Tap on the update file.
5. Confirm with **Update**.
6. A reboot of the devices is needed to complete the system update. Please confirm with **OK**.

SYSTEM UPDATE VIA USB CABLE

The manufacturer may publish a system update in individual cases on the homepage as well. Please inform yourself on www.phicomm.com/de/Software-Updates, if an update is available for your device.

1. Download the update file from the website to your computer.
2. Insert a SD card into your phone.

3. Backup your data.
4. Connect your Phicomm device via a USB cable with your PC.
5. Pull down the status bar.
6. Tap on **Connected as ...**.
7. Tap **SD card**.
8. Copy the system update file to Phicomm device into the external memory.
9. Tap on **System Update** on the homescreen.
10. Tap on **Local updates**.
11. Tap on the update file and confirm with **OK**. A reboot is required to complete the system update.

BACKUP OF DATA

Use the application Phicomm Backup to backup & restore data. Thus, certain settings and data can be restored after the system update.

Data types that can be stored

With the Phicomm Backup app you can save the following data types:

- ◆ Bookmarks
- ◆ Call log
- ◆ contacts
- ◆ SMS / MMS
- ◆ System settings
- ◆ Downloaded apps from the Google Play™ store

You don't need to save music files, photos and videos taken with the device camera as those files will be saved on the internal memory card of your phone automatically.



NOTICE: When restoring Google Play™ apps additional data charges may incur.

Preparing for Backup & Reset

1. Tap the **menu key** on the homescreen.
2. Select **System settings > Backup & Reset**.
3. Activate the check box **Back up my data** and **Automatic restore**, you data will now be automatically restored after a system update.

FACTORY DATA RESET

Resetting your phone deletes all data on the internal memory card and phone memory, including downloaded applications, and enables the phone to its original state. Back up your data before resetting your phone. To backup your data you can copy them to your PC.

RESETTING THE PHONE


1. Tap the **menu key** on the home screen.
2. Select **System settings > Backup & reset**.
3. Tap on **Factory data reset**.
4. When prompted, tap **Reset phone** and then tap **Erase everything**. The phone resets the settings to the original factory settings and then restarts.

ENTERING TEXT

OVERVIEW KEYBOARD

In some applications, the keyboard will open automatically. In others, the text input field must be touched first.

OVERVIEW

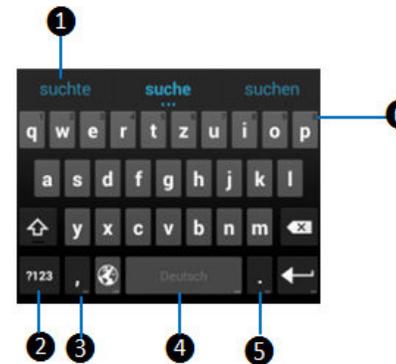

Number	Function
①	Tippen Sie auf einen Vorschlag, um diesen einzufügen
②	Tap to enter parentheses, currency, punctuation marks and special characters
③	Tap & hold to select input options
④	Tap & hold to select input method
⑤	Tap & hold for more input characters
⑥	Tap & hold to enter the top number or for more characters

BASIC EDITING OPTIONS

- ◆ **Move the insertion point:** Tap the place you want to enter the text. The cursor blinks at the new location and a blue tab appears.
- ◆ **Mark text:** Tap & hold the text or double-tap the text you want to select. The next word is selected, each with a tab on the right and left. Move the tabs to change the selection.
- ◆ **Delete text:** Tap  to delete the selected text, or to delete the character before the cursor.
- ◆ **Type capital letters:** Tap  once to write one capital letter. Tap twice to write several capital letters. The Shift key is this then highlighted in blue. You can also tap & hold  (Shift

key) while you are writing. Once you release the button, the keyboard returns to lowercase.

- ◆ **Cutting, coping, pasing:** Select the text you want to edit. Tap on Cutting  twice to cut out a text. Tap on Copy  to copy the marked text. If there is something to paste you will see Paste .

USE PROPOSED NEXT WORD

1. Tap the place you want to add the text.
2. Start typing. You can find the proposals under . Tap & hold the suggested word until a list appears.
3. Select the desired word from, when present in the list.
→ **Android will make a suggestion for each word.**

USING TOUCH KEYBOARD

When you start a programm or select a field that requires text or numbers, the Android keyboard opens automatically.

SELECT KEYBOARD

The phone will automatically open and display the keyboard when you want to enter text. You can select the keyboard language(s) as followings:

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Language & input > KEYBOARD AND INPUT METHODS.**
3. Tap on .
4. Tap on **Input languages.**
5. Select **Use system language** or more other languages.
6. Tap the **back key** to return to **Language & input** settings.
7. Tap **Default** and select the default keyboard language.



NOTICE: *If you select more than one language, you can switch between these languages while entering text.*

8. Tap **Default** and select the keyboard language.

SWITCH LANGUAGE WHILE TYPING

If you have selected more than one language as keyboard language you can switch between those while entering text.

1. In entering mode tap on  or long press the space button on the keyboard.
2. Select a language. If you are missing a language you can tap on **Set up input methods** and you will be prompted to the Android Keyboard. Activate the keyboard language(s) you would like to use by moving the slider.

USE LANDSCAPE KEYBOARD

While entering text, you can rotate the device in landscape mode, and keep writing. This function is set as default.

To change this function

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Display.**
3. By tapping on the **Auto-rotate screen** check box you can activate or deactivate this function.

ENTER NUMBERS AND SYMBOLS

You can switch to the numeric mode for a more comfortable way to enter numbers and common symbols such as parentheses, currency sign, punctuation marks, and special characters. Just tap on . To return back just tap the button again.

WORKING WITH DICTIONARIES

You can add your own words to your personal dictionary so that the device is reminiscent of this.

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Language & input.**
3. Tap on **Personal dictionary.**
4. Tap on the dictionary you want to add a word.
5. Tap on , to add a new word or abbreviation.
6. Type a word and / or optional shortcut.
7. Tap the **back key**, then the new word is added in the personal dictionary.

CALL MANAGEMENT

MAKE PHONE CALLS

You can dial a number directly, or use a number from your call history or contacts .

MAKE A CALL BY DIALING A PHONE NUMBER

1. Tap on  on the home screen.
2. If the keyboard does not appear automatically, tap on .
3. Type in the phone number. To delete a number tap on , to delete the complete phone number press and hold .
4. Tap on .



NOTICE: The phone has a dual SIM card system. If you are using both SIM cards you will see . In case of non-selection a SIM card, the phone assumes the standard SIM card to make the call.

MAKE A CALL BY USING THE CONTACTS

1. Tap the **Dialer** app.
2. Tap on **All contacts**.
3. Select a contact from the list.

MAKE A CALL BY USING THE CALL HISTORY

1. Tap the **Dialer** on app.
2. Tap on .
3. Tap on a number to call back.

USE THE PHONE NUMBER IN A TEXT MESSAGE

You also can call a phone number directly from a text message.

1. Open the message.
2. Tap on the number in the text message.
3. Tap on  / .
4. Select the SIM card, if two SIM cards in phone.

CALL FOR EMERGENCY ASSISTANCE

If no SIM card included the emergency number can still be called:

1. Tap on the **Dialer** app.
2. If the keyboard does not appear automatically, tap on .
3. Enter the international emergency number for your country and, and tap on  / .



NOTICE: If no SIM card is inserted or outgoing calls are blocked, you still can make an emergency call.

ACCEPT OR REJECT AN INCOMING CALL

ACCEPT AN INCOMING CALL

Press and hold  and move it to  to accept the call.

NOTICE: If you receive a call from an existing contact, the number and name will be displayed. If you get a call from someone who is not in your contacts, you will see the standard layout and number (if the caller is not suppressing his number).

REJECT AN INCOMING CALL

Press and hold the  and move it to  to reject the call.

MUTE YOUR RINGTONE

To mute your phone without refusing the caller, simply press the volume button and adjust the volume on quietly.

USECALL OPTIONS

During the call, tap on the menu key to get the dialogue window. With the hold button calls can be maintained.



Number	Function
①	Ending a call
②	Open dial-keypad
③	Activate speakerphone
④	Microphone on / off
⑤	Interrupt call
⑥	Initiate a conference call
⑦	Shows what SIM card you are using for the call

SWITCH ON / OFF SPEAKER DURING A CALL

1. Tap on ③ to activate the speaker. The icon will be highlighted with a blue bar when activated.
2. Tap again on ③, to deactivate the speaker. The blue bar disappears when the speaker is turned off again.

WARNING! To prevent potential damage to your ear, do not keep your ear directly to the activated speaker.



MUTE PHONE DURING A CALL

1. Tap on ④, to run off microphone. The icon will be highlighted with a blue bar when muted.
2. Tap again on ④, to deactivate mute function. The blue bar disappears when mute function is turned off.

PUT A CALL ON HOLD

1. Tap on ⑤, to interrupt the call. The icon will be highlighted with a blue bar when call is on hold.
2. Tap again on ⑤, to continue the call. The blue bar disappears when call continues.

END A CALL

Tap on ① to end the call.

If the number is not stored in your contacts, you can find it in the call history and add it to your contact list after you hang up.

TO USE CALL HISTORY

The symbol  appear in the status bar when you missed a call. You can use the call history to check / edit missed calls, incoming and outgoing calls.

USE THE CALL HISTORY

1. Tap on the **Dialer** app.
2. Tap on . You will get an overview of missed, outgoing and incoming calls.
3. Select the number to have the call details.
4. Tap on  next to the number / name to make a call.
5. Tap on  to add to contacts.
6. Tap on  to send a text message to this contact.



NOTICE: The phone will recall on the current SIM card by default, if you use the call history directly.

CLEAR THE CALL HISTORY

Follow the following steps to clear the call history:

1. Tap on the **Dialer** app.
2. Tap on . You will see and overview of all missed, incoming and outgoing calls.
3. Tap on the **menu key** > **Clear call log** to delete the whole list.
4. To delete a single call, tap on the call and then tap on the menu key.
5. Tap on **Remove from call log**.

MULTIPLE CALLS

If you enabled the call waiting function you can perform multiple calls simultaneously. You will get an alert about another incoming call with a beep.

ACTIVATE CALL WAITING SERVICE

1. Tap on the **Dialer** app.
2. Tap on  at the bottom right and select **Settings**.
3. Tap on **Call settings** and select the SIM card you would like to activate the call waiting service.
4. Tap on **Additional settings**.
5. Tap on **Call waiting**, to activate/deactivate this service. A checkmark in the check box means that this service is activated.



NOTICE: Not all mobile phone contracts can execute the call waiting service.

The phone is operating with dual SIM standby. It can handle multiple calls at a time on the same SIM card, but not both

SIM card simultaneously. If you make a call on SIM 1 you can't answer or make a call on SIM 2 at the same time.

ANSWER FURTHER CALL / CURRENT CALL ON HOLD

If you hear repeated beeps during a call, slide  to the right to answer the new incoming call. The first call will remain in holding position. If you hang up the second call you will return to the first one.

MAKE A FURHTER CALL

1. Tap on  while you are in a call.
2. Tap **Add call** to make second call.
3. Enter the number and tap on  / . The device is operating with dual SIM standby. Please select the SIM card you started the conference call with.
4. When the recipient replies, the first call is put on hold.

SWITCH BETWEEN DIFFERENT CALLS

Tap on the desired number / contact to switch to the other call. The current call is on hold in the meantime.

END CURRENT CALL / RETURN TO THE CALL ON HOLD

Tap on  to end the call and return to the next call that is on hold.

CONFERENCE CALL

A conference call allows you a conversation with two or more persons.

START A CONFERENCE CALL

1. During a call tap on call menu .
 2. Tap on **Add call** to add a participant.
 3. Enter the number and tap on  / . The device is operating with dual SIM standby. If you inserted two SIM cards, please select the SIM card you started the conference call.
 4. When the recipient replies, the first call is put on hold.
 5. Tap on  to merge the calls.
- Repeat step 1 to 4 to add further participants.

REMOVE PARTICIPANTS FROM CONFERENCE CALL

1. While you are in a conference call tap on **Manage conference**. You will see all participants.
2. Tap on the  to the participant you want to remove from the conference call.

PRIVATE CONVERSTATION WITH A CONFERENCE CALL PARTICIPANT

1. While you are in a conference call tap on **Manage conference**. You will see all participants.
2. Tap on  on the left side of the participant. The other participant(s) will be put on hold.
3. If you want to merge the participants and return to the conference call tap on .

END A CONFERENCE CALL

While you are in a confrence call tap on the red phone.

TO ADJUST CALL SETTINGS

You can customize your call settings like voicemail or call forwarding service.

To access to the call settings:

1. Tap on the **Dialer** app.
2. Tap on  at the bottom right and select **Settings**.
3. Tap on **Call settings** and select the SIM card you would like to configure.

Call settings	
Phone ringtone	Set the ringtone you want for your selected SIM card
IP call setting	Edit the IP prefix for IP call
Voicemail	Set up your voicemail
Quick responses	Reply with quick responses
Fixed Dialing Numbers	Limit your phone numbers
Call forwarding	Set up your phone to: Always forward, Forward when busy, Forward when unanswered, Forward when unreachable
Additional settings	Enable or disable phone services

	like Caller ID or call waiting
Call barring	Set up outgoing call barring, incoming call barring, cancel all call barring, and change the password.

To adjust the ringtones or vibration please

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Sound**.
3. Adjust ringtone, volume, or vibration as wished.

SWITCH ON / OFF PHONE FUNCTIONS

When you enable the airplane mode, all wireless connections on the device will be turned off, including call function, Bluetooth and WLAN.

ENABLE / DISABLE AIRPLANE MODE

1. Tap the **menu key** on home screen.
2. Tap on **System settings > Wireless & networks > More**.
3. Tap on **Airplane mode** to activate it. You will see the airplane icon in the status bar.



NOTICE: When you disable the airplane mode, all previous functions (incl. call function, Bluetooth and WLAN) will be restored.

CONTACTS

You can use the contacts app to manage your phone numbers, emails and other contact information in one place.

TRANSFER CONTACT INFORMATION

There are several ways to transfer contacts to your new device.

BY USING GOOGLE™

You can synchronize your device with different Google™ services. You just need to have a Google™ account where all your data is up to date.

Create a Google™ account

1. Tap the **menu key** on the home screen.
2. Select **System settings > Add account > Google**.
3. Follow the instructions to set up a Google™ account or login into your Google™ account.

Synchronize your contacts with your Google™ account

1. Tap the **menu key** on the home screen.
2. Select **System settings > Google**.
3. Tap on the Google™ account you want to synchronize with. A list with applications will be shown that can be synchronized.
4. Tap the checkbox next to **Contacts**. Data will be synchronized automatically.

USE A SIM CARD

To synchronize your contacts via a SIM card, you have to make sure that all your contacts are stored on your SIM card. If this is not the case you have to transfer them from your old phone to the SIM card.

1. Tap on the **Contacts** app.
2. Tap on the **menu key**.
3. Tap on **Import / export**.
4. Tap on **Import from SIM card**. If two SIM cards are inserted you will be asked to select SIM 1 or SIM 2 card.
5. Select **Phone** to save your contact on the phone.
6. Select the contacts you want to import or tap on **All** if you want to import all.
7. Confirm with **OK**.
8. Confirm again with **OK**.

BY USING A SD CARD

To synchronize your contacts by using a SD card you have to create vCard files and transfer them to the SD card. Please make sure all contacts are transferred from your old device to your sd card.

1. Tap on the **Contacts** app.
2. Tap on the **menu key**.
3. Tap on **Import / export**.
4. Tap on **Import from storage**.
5. Tap on **Phone** to save your contacts in the phone memory and choose **Internal Storage**.
6. Confirm with **OK**.

BY USING BLUETOOTH™


You can send your contacts via Bluetooth™ to your new device. Please make sure that both devices to have the Bluetooth™ function and visibility enabled. Otherwise a transmission is not possible.

1. Tap on the **Contacts** app.
2. Tap on the contact you would like to transmit via Bluetooth™.
3. Tap on the **menu key**.
4. Tap on **Share > Bluetooth**.
5. Select the device you would like to transfer the contact to. If there is no list please tap on **Scan for devices**.
6. Accept the incoming file by tapping on **Accept**.
7. The received contact information will be displayed as vCard attachment in the status bar. Tap on vCard file to edit and save it.

MANAGE CONTACTS

You can create, edit, and delete your contacts in a few simple steps.

OVERVIEW CONTACT APP

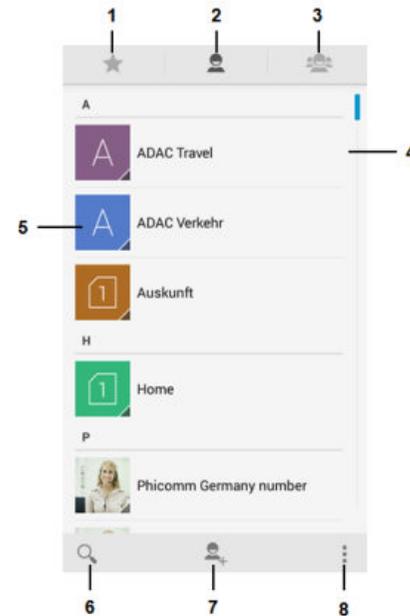

Number	Function
①	Tab - Groups
②	Tab - Contacts
③	Tab - Favorites
④	Tap on contact to show contact details
⑤	Tap on picture to show quick contact menu
⑥	Search for contact s
⑦	Add contact

MANAGE CONTACTS

Show contacts

Tap on the **Contacts** app.

Add contacts

1. Tap on the **Contacts** app.
2. Tap on **Add contacts** ⑦.
3. If you have synchronized your contacts with more than one account, select the account to which you want to add the contact.
4. Enter the contact information.
5. Tap on **DONE**.

Edit contacts

1. Tap on **Contacts** on the homescreen.
2. Tap on the contact you want to edit, tap on the **menu key** and select **Edit**.
3. Make your changes and confirm with **DONE**.

Link a contact with a picture

1. Tap on **Contacts** on the homescreen.
2. Tap on the contact you want to add a picture, and tap on the picture area.
3. Tap on and select a method to add a picture to your contact.
4. After added the picture confirm with **OK**.

Show all communication with a contact

1. Tap on the **Contacts** app.
2. Tap on the contact you want to see the communication.
3. Tap on  next to the number. You will get an overview of the different messaging apps.



NOTICE: If you did not install any 3rd party app, you only will see the SMS app.

Delete contacts

1. Tap on **Contacts** on the homescreen.
2. Tap on the contact you want to delete.
3. Tap the **menu key** and tap **Delete**.
4. Confirm with **OK**.
5. To delete more than one contact at the same time, tap on the **menu key** in the contact overview list.
6. Tap on **Delete**.
7. Tap on the contact you want to delete or tap on **Select All**. The check box will be marked.
8. Confirm your selection with **OK**.
9. Confirm to delete contacts with **OK**.

Edit own contact details

1. Tap on the homescreen on **Contacts**.
2. Tap on **Contacts** .
3. Tap on **Set up my profile**.
4. Insert your data and confirm with **DONE**.

FAVORITES

You can mark contacts as favorites to quickly access them via the Favorites tab.

Add to favorites

1. Tap on **Contacts** on the homescreen.
2. Tap on the contact you want to add to favorites.
3. Tap on .

Show favorites

1. Tap on **Contacts** on the homescreen.
2. Tap on the tab **Favorites** .

GROUPS

You can combine contacts in groups and assign contacts to a group to access quickly the selected contacts.

1. Tap on **Contacts** on the homescreen.
2. Tap on the tab **Group** .
3. Tap on  if you want to use a default group.
4. Tap on  if you want to create a new group. Insert group name and confirm with **DONE**.
5. Tap on a group, tap on **Add members**.
6. Select the group members by tapping on the name.
7. Confirm with **OK**.
8. To return to the contact list tap on the **back key**.

SEARCH CONTACTS

1. Tap on **Contacts** on the homescreen.
2. Tap on **Search** .
3. Enter the first letters of the contact in the field **Find contacts**.
All contacts will be displayed that start with those letters.

TRANSFER CONTACTS

Send you vCard

1. Tap on **Contacts** on the homescreen.
2. Tap on your contact.
3. Tap the **menu key** and tap on **Share** or **Send contact via SMS**.
4. Select a method and follow the instructions.

Send contacts

1. Tap on **Contacts** on the homescreen.
2. Tap on the contact you want to send.
3. Tap the **menu key** and tap on **Share** or **Send contact via SMS**.
4. Select a method and follow the instructions.

Send all contacts at once

1. Tap on **Contacts** on the homescreen.
2. Tap the **menu key**.
3. Tap on **Import / export**.
4. Tap on **Share visible contacts**.
5. Select a method and follow the instructions.

BACKUP CONTACTS

You can backup your contacts using a SIM card, a memory card or a Google™ account.

Backup on SIM card

1. Tap on the **Contacts** app.
2. Tap on the **menu key**.
3. Tap on **Import / export**.
4. Tap on **Export to SIM card**. If you are using two SIM cards in your phone select the SIM card you would like to export your contacts to and confirm with **OK**.
5. Select the contact(s) you want to backup on the SIM card by tapping on them.
6. Confirm with **OK**.

Backup on SD card

1. Tap on the **Contacts** app.
2. Tap on the **menu key**.
3. Tap on **Import / export**.
4. Tap on **Export to External Storage (SD card)**.
5. Select the contact(s) you want to backup on the SD card by tapping on them.
6. Confirm with **OK**.

MESSAGING

USE SMS AND MMS

With the SMS (Short Message Service) you can use your phone to send and receive text messages. If your subscription includes MMS (Multimedia Messaging Service) you can send and receive messages that contain media files (e.g. pictures, videos). The number of characters allowed in a single text message can vary depending on the operator and the selected language. When sending SMS / MMS charges apply.



NOTICE: You have to activate the Mobile Data to send MMS (**Settings > Wireless & Networks > Mobile data > ON**).

COMPOSE AND SEND MESSAGES

1. Tap on the **Messaging** app.
2. Tap on **Add message** .
3. Enter the phone number of the recipient in the address bar. The potential recipients from the contact will be displayed while you are typing. To add a recipient from the contact list, tap on  and select the contact and confirm with **OK**.
4. Tap on **Type message** and enter your text.
5. If you want to add a media file tap on  and select an attachment type.
6. Tap on  to send the message.



NOTICE: The phone has a dual SIM card system. If you are using both SIM cards you will see  | . In case of non-selection a SIM card, the phone assumes the standard SIM card to make the call.

SAVE MESSAGES AS DRAFT

A text message will automatically be saved as Draft after you tapped on the back key (if a recipient has been added otherwise you will be asked to discard the message). You will get the information "Message saved as draft". If you want to continue tap on the draft message in the message list. The draft message is marked with "Draft".

SHOW MESSAGES

1. Tap on the **Messaging** app.
2. Tap on a conversation to view the text.



NOTICE: Depending on your notification settings, the phone rings or vibrates when receiving a message. The notification icon also points to this new message. You can drag the status bar downward and tap on the received message to view it.

ANSWER MESSAGES

1. Tap on the **Messaging** app.
2. Tap on the message you would like to answer.
3. Enter your answer and tap on  |  to send the message. The phone is operating with dual SIM; you can decide which SIM card should be used to answer the message.

FORWARD MESSAGES

1. Tap on the **Messaging** app.
2. Tap on the conversation that includes the message you would like to forward.
3. Press and hold the message and tap on **Forward**.
4. Tap on **To** and enter the phone number either manually or choose one from the contact list .
5. Edit the message and tap on  |  to send the message.

DELETE MESSAGES

1. Tap on the **Messaging** app.
2. You can choose between:
 - ♦ If you want to delete a message history, press and hold the conversation, it will be marked. Tap on  to delete the conversation and confirm with **Delete**.
 - ♦ If you want to delete a single message, press and hold the message, select **Delete**. Confirm with **Delete**.

MESSAGING SETTINGS

1. Tap on the **Messaging** app.

2. Tap on the **menu key > Settings**.
3. Now the following settings can be made:

General	
SMS Enabled	Touch to change your default SMS app
STORAGE	
Delete old messages	Select this option to delete old messages as limits are reached
Text message limit	Select this option to set the maximum number of messages (500) per conversation
Multimedia message limit	Select this option to set the maximum number of messages (50) per conversation
Card 1/2 preferred storage	Select phone or SIM card as the preferred storage
TEXT (SMS) MESSAGES	
SIM 1/2 Delivery reports	Request a delivery report for each message you send
Message template	Edit message template
Manage SIM card messages	Manage messages stored on your SIM card
SMS Validity Period for SIM 1 / 2	Select the time period that the SMS should be available
SMS SIGNATURE	
SMS signature	Select this option to enable SMS signature
Edit SMS signature	Select this option to edit the SMS signature to appear at the end of each message
MULTIMEDIA (MMS) MESSAGES	
Group messaging	Use MMS to send a single message when there are multiple recipients
Delivery reports	Request a delivery report for each message you send
Read reports	Request a read report for each message you send
Auto-retrieve	Select this option to automatically retrieve all your MMS messages. This option allows the automatic download

of content and file attachments from a MMS. If you disable this function, only the subject of the MMS is retrieved and displayed in the message list

Roaming auto-retrieve	Select this option to automatically receive MMS while you have the roaming mode activated. Substantial costs for traffic may incur when this function is enabled.
-----------------------	---

SIM 1 / 2 MMS validity period	Select the time period that the MMS content should be available.
-------------------------------	--

NOTIFICATIONS

Notifications	Display message notifications in status bar
---------------	---

Sound	Select a ringtone to play when you receive a message.
-------	---

Vibrate	Select this option if you want your phone to vibrate when you receive a new text or multimedia message.
---------	---

AUTO PUSH SERVICE MESSAGE SETTING

Enable WAP Service	PUSH	Enable or disable to receive service message
--------------------	------	--

SMSC SETTINGS

Set the SIM 1 / 2 SMSC number	Here you can enter the number of the message center (SMSC) for your mobile provider for SIM1 or SIM2
-------------------------------	--

E-MAIL

With the Email app, you can manage multiple email accounts simultaneously. You can set up a business Microsoft Exchange™, a private or your Google™ email account.

MANAGE YOUR EMAIL ACCOUNTS

SET UP AN EMAIL ACCOUNT

1. Tap on the **Email** app.
2. Follow the instructions to set up an email account. This instructions will only appear if you haven't set up any email account yet.



NOTICE: If necessary you need to contact your Email service provider to obtain information about the exact settings of your email account.

SET UP EMAIL ACCOUNT AS DEFAULT

1. Tap on **Email** on the homescreen.
2. Tap the **menu key** and select **Settings**.
3. Select the account that you want to set as default account.
4. Activate the check box **Default account**. The inbox of that account will be displayed each time you open the Email app as a standard. If you have only one account, this is automatically your default account.

TO ADD FURTHER EMAIL ACCOUNTS

1. Tap on the **Email** app.
2. Tap on the **menu key** > **Settings**.
3. Tap on **Add account**.
4. Enter the email address and password and tap on **Next**.
5. For easier identification enter a name for your email account when you are prompted. This name appears when sending emails from this account.
6. When finished confirm with **Next**.

TO DELETE EMAIL ACCOUNTS

1. Tap on **menu key** on the home screen.
2. Tap on **System settings** > **Accounts**.

3. Tap on the email type of the email account you want to delete.
4. Tap on the email you want to delete.
5. Tap on the **menu key** > **Remove account**.
6. Confirm with **Remove account**.

USE EMAIL

COMPOSE AND SEND EMAIL

1. Tap on the **Email** app.
2. If you have set up several email accounts, tap the top of the **inbox** and select the account from which you want to send the email.
3. Tap on .
4. Tap on **To** and start entering the recipient. Matches are displayed in a dynamic list. Tap the desired recipient (match) or proceed entering the email address. You can enter additional addresses, which must be separated by a comma (,) or a semicolon (;).
5. You also can use an email address from your contacts. Tap on . Tap the check box next to the recipient(s) you want to add and confirm with **OK**.
6. Tap on **Subject** and enter the subject text of the email.
7. Tap in the message field and type your text.
8. If you want to add an attachment, tap on the **menu key** and select **Attach file / picture / video**.
9. To add Cc/Bcc addresses tap on the **menu key** and select **Add Cc/Bcc**.
10. Tap on  to send the email.

RECEIVE EMAILS

1. Tap on the **Email** app.
2. If you have set up several email accounts, tap the top of the **Inbox** and select the account you want to view your emails.
3. Tap the **menu key** and select **Refresh** or slide down the screen with your finger to check new mails.



NOTICE: You can set the inbox check frequency for your emails. The device automatically synchronizes your emails according to the set frequency.

ADJUST FREQUENCY

1. Tap on the **Email** app.
2. Tap on the **menu key** > **Settings**.
3. Select the account you want to adjust the email frequency.
4. Tap on **Sync frequency** and select the wished mail synchronization frequency.

SHOW EMAILS

1. Tap on the **Email** app.
2. If you have set up several email accounts, tap the top of the **Inbox** and select the account .
If you want to view your emails from all accounts at once, tap on **Combined view**.
3. You now can scroll up or down the inbox. To view the target email tap on it.

ANSWER EMAILS

1. Tap on the **Email** app.
2. Select the email in your inbox you want to answer and tap .
3. Enter your text and tap on  to send the email.

FORWARD EMAILS

1. Tap on the **Email** app.
2. Select the email in your inbox you want to forward and tap on .
3. Tap on **Forward**.
4. Tap on **To** and enter the email address either manually or select a contact from the contact list .
5. Enter your text and tap on  to send the email.

DELETE EMAILS

1. Tap on **Email** on the the home screen.
2. Select the email in your inbox you want to delete and tap on .

SHOW FOLDER FOR YOUR EMAIL ACCOUNTS

1. Tap on the **Email** app.
2. Tap on the inbox. You will see All folders at the menu that will open.

WLAN

Your device can connect via WLAN, GPRS/3G/4G or EDGE to the internet.

With WLAN, you can access the internet wirelessly over a distance up to 100 meters from the router. To access the internet via a wireless connection, you need to look for an available wireless network and connect to this network. The strength of the signal depends on several factors and may therefore vary.

TURN ON WIRELESS FUNCTION AND CONNECT TO WIRELESS NETWORK

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks**.
3. Activate **WLAN** by tapping on the slider. It will turn to blue.
4. Select a network to which you want to connect. If you select an unsecured network, you are automatically connected. If you select a secured network, you have to enter the network key. Once the connection is established, the WLAN icon appears in the status bar .
5. You can refresh the network list by tapping on .

Alternatively, you can also work with the status bar directly:

1. Wipe the status bar down.
2. Tap on Settings .
3. Activate **WLAN** as above described.



NOTICE: Next time you use your device to detect Wi-Fi networks, you will not be prompted to enter the network key of the previously accessed Wi-Fi network (unless you perform a hard reset which will erase custom settings on your device).

WLAN networks are self-discoverable, which means no additional steps are required for your device to connect to a WLAN network. It may be necessary to provide a username and password for certain closed wireless networks.

SEARCH FOR WLAN NETWORK MANUALLY

1. Tap the **menu key** on the home screen.

2. Tap on **System settings > Wireless & Networks**.
3. Activate WLAN by tapping the bar ON / OFF. It will turn to blue.
4. Tap on **WLAN** and the on **add network** manually .
5. Enter the **Network SSID** and set the **Security** options.
6. Enter the **password** if prompted.
7. Confirm with **Save**.



NOTICE: Contact your wireless network provider to obtain information about the exact settings for the SSID network.

WLAN NETWORK STATUS

If you are connected to a WLAN network or when a WLAN network is available within your reach, you can view the status. You can set up your phone to get a notification when an open WLAN network is detected.

Status bar: Once you are connected to a WLAN network, the WLAN icon appears and informs you about the signal strength . If the WLAN notification is enabled, you will be automatically informed by this symbol when an open network has been detected.

ENABLE WLAN NETWORK NOTIFICATION

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks > WLAN**.
3. Activate WLAN.
4. Tap on the **menu key > Advanced**.
5. Tap on the check box **Network notification**.

SHOW DETAILED INFORMATION ABOUT THE ASSIGNED WLAN NETWORK

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks > WLAN**.
3. Tap on the WLAN network to which you are currently connected. Detailed information about the network will be displayed.
4. To close this information tap on **Cancel**.

DISCONNECT WLAN NETWORK

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks > WLAN**.
3. Tap on the WLAN network you want to disconnect.
4. Tap on **Forget**.

WLAN NETWORK IN STANDBY MODE

Enabling the wireless network in standby mode, you can specify when to switch from WLAN to mobile data.



NOTICE: *If you are not connected to a WLAN network, the phone uses a mobile data connection to access the internet (if you have set up and enabled a mobile data connection on your phone).*

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks > WLAN**.
3. Tap on the **menu key > Advanced**.
4. Tap on **Keep WLAN on during sleep**.
5. Select an option.

INTERNET BROWSER

You can start the browser to display web pages and navigate, set bookmarks and save websites to read offline. The browser has been optimized for ease of use. A connection to a 3G, GPRS or WLAN network is required.

USE INTERNET BROWSER

OPEN INTERNET BROWSER

Tap on the **Browser** app on the home screen.

ACCESS A WEB PAGE

1. Tap on the **Browser** app.
2. Enter the internet address in the address field. As you type, possible addresses automatically will be displayed. You can select one or continue to enter your address.
3. Confirm with **Go**.



NOTICE: *Sometimes the search and address field is not displayed automatically after the browser has been opened. Strike down the top of the screen; the search and address field will be displayed again.*

SET AS HOMEPAGE

1. Tap on the **menu key** while you are on a website.
2. Tap on **Settings > General**.
3. Tap on **Set homepage**.
4. Choose from list or **Cancel**.

END BROWSER

1. Tap on the **menu key**.
2. Tap on **Exit**.
3. Please select how to exit the browser.



NOTICE: *Even after a restart of the phone the most recently used settings will be shown when you return to the browser.*

BROWSER SETTING

You can customize the browser, for example, specify the home screen, set the font size or clear the cache, cookies, and other data associated with the websites.

CHANGE BROWSER SETTINGS

1. Tap on the **menu key** while you are on a website.
2. Tap on **Settings**.
3. Make your changes and return with the return key.

CHANGE TEXT SIZE ON WEBSITES

1. Tap on the **menu key** while you are on a website.
2. Tap on **Settings > Accessibility**.
3. Make your adjustments and return with the return key.

CLEAR CACHE, COOKIES, HISTORY

1. Tap on the **menu key** while you are on a website.
2. Tap on **Settings > Privacy & security**.
3. Make your adjustments and confirm with **OK**.
4. Return with the return key to the website.

NAVIGATE THE BROWSER

ZOOM WEBSITE

You can choose two different ways to zoom in or out on a website:

1. Touch the area you would like to zoom with two fingers at the same time. Pull apart with your fingers to zoom out and pull your fingers together to zoom in.
2. If the website is not optimized for smart phone you also can double-tap the screen to zoom in. To zoom out, double-tap the screen again.

SAVE WEBSITES FOR OFFLINE READING

1. Tap the **menu key** while you are on the website you wish to save for offline reading.
2. Tap on **Save for offline reading**. The website will be saved in a separate tab in the saved website overview.

SHOW SAVED WEBSITES

1. Strike down the screen while you are on a website.
2. Tap on  .
3. Tap on  . Different tabs will appear. Select **Saved Pages**.
4. Select the saved website you want to view.

OPEN THE LIVE-VERSION OF AN OFFLINE WEBSITE

1. If you have opened a website in offline reading mode, and you want to display the live version now, tap on the **menu key**.
2. Tap on **Go live**.

SHARE LINKS

1. Tap on the **menu key** while you are on the website you want to share.
2. Tap on **Share page**.
3. Select one of the possible services and follow the instructions.

WORK WITH SEVERAL WEBSITES

You can open to 16 websites simultaneously on the web browser. The switch between these windows is easy to handle and makes a multiple use of the Internet possible.

OPEN NEW BROWSER WINDOW

1. Scroll down the screen while you are on a website, to open the search and address field.
2. Tap on .
3. Tap on  . A new browser window will open.

SWITCH BETWEEN WEBSITES

1. Scroll down the screen while you are on a website, to open the search and address field.
2. Tap on .
3. You can scroll up and down to view the list of all open websites. Wipe the sides to the left or to the right, to delete them.
4. Tap on the website you would like to open.

CLOSE A WEBSITE

1. Scroll down the screen while you are on a website, to open the search and address field.
2. Tap on . You will get an overview of all open websites.
3. Tap on  or scroll the website to the left or to the right to close it.

MANAGE BOOKMARKS

You can use bookmarks to quickly access your favorite pages. Those can be added directly from the browser.

Depending on the network provider some bookmarks maybe pre-installed.

BOOKMARK A WEBSITES

1. Tap on the **menu key** while you are on the website you would like to bookmark.
2. Tap on **Save to bookmarks**.
3. If necessary adjust the bookmarks settings and confirm with **OK**.

OPEN BOOKMARKS

1. Tap the **menu key** while you are on a website.
2. Tap on **Bookmarks**.
3. Tap on **Local**, if the bookmarks are not shown automatically.
4. Tap on the website you would like to open.

EDIT BOOKMARKS

1. Tap on the **menu key** while you are on a website.
2. Tap on **Bookmarks**.
3. Press and hold the website you want to edit.
4. A menu pops up. Tap on **Modify bookmark**.
5. Edit the bookmark and confirm with **OK**.

DELETE BOOKMARKS

1. Tap on the **menu key** while you are on a website.
2. Tap on **Bookmarks**.
3. Press and hold the website you want to delete.
4. A menu pops up. Tap on **Delete bookmark**.
5. Confirm with **OK**.

ADD BOOKMARKS TO HOMESCREEN

1. Tap on the **menu key** while you are on a website.
2. Tap on **Bookmarks**.
3. Press and hold you want to add to the home screen.
4. A menu pops up. Tap on **Add shortcut to home**.
5. Confirm with **OK**.

MANAGE TEXT AND PICTURES

SEARCH TEXT ON A WEBSITE

1. Tap on the **menu key** while you are on a website.
2. Tap on **Find on page**.
3. Type in the keyword you are looking for. Text / characters that match your search will be highlighted.
4. To jump from one to the other element, tap on . Arrow facing up takes you to the previous element and arrow facing down to the next one.
5. Tap on  to close the window.

COPY TEXT

1. Press and hold a word of the text you want to copy until it will be highlighted with a frame . You now can move the tabs to the right or left to mark the desired text.
2. Tap on . The selected text is copied to the clipboard.
3. To insert the text press and hold the text field in the application (email, SMS or MMS) until **Paste** will appear.
4. Tap on **Paste**.

SAVE PICTURE

1. Press and hold the picture you want to save until a menu pops up.
2. Tap on **Save image**.
3. Adjust name and path and confirm with **OK**.
4. Default path if not adjusted: **Internal Storage > Pictures**.

DOWNLOAD PATH SETTINGS

You can custom the download path:

1. Tap on the **menu key** while you are on the website.
2. Tap on **Settings > Advanced > Custom Download Path**.

3. Select the path you would like to use as default and confirm with **OK**.

ADVANCED BROWSER SETTINGS

In the advanced browser settings you can amongst others enable plug-ins, set auto-scaling of websites or block pop-up windows.

ACTIVATE PLUG-INS

You can enable plug-ins in order to achieve optimal results displaying websites. You can configure plug-ins only to be active only on request, which increases the browser speed.

1. Tap on the **menu key** while you are on a website.
2. Tap on **Settings > Advanced > Enable plug-ins**.
3. Select a plug-in setting.



NOTICE: *The browser may need to be restarted to activate the made settings.*

AUTO-FITS PAGES

If autoscaling is enabled, the browser will adjust the size of text and images automatically. If this function is not enabled, you may need to scroll to the next page to get the complete text.

1. Tap on the **menu key** while you are on a website.
2. Tap on **Settings > Advanced > Auto-fit pages**.

POP-UPS

With this function you can block pop-ups.

1. Tap on the **menu key** while you are on the website.
2. Tap on **Settings > Advanced > Block pop-ups**.

BLUETOOTH™ SETTINGS

Bluetooth™ is a wireless communication technology with short range. Devices with Bluetooth™ capabilities can exchange data easily over a distance of 8 meters. There should be no solid objects in the line of sight between the two devices. You can enable the visibility of your device to be found by other devices.

TURN ON BLUETOOTH™ AND MAKE YOUR DEVICE VISIBLE

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks**.
3. Activate Bluetooth by tapping the **ON/OFF** bar. I will turn blue.
4. Tap on **Bluetooth**. You will see a list with all available Bluetooth devices.
5. To make your device visible to others, tap the name of your device. Tap on the name again and you device won't be visible any longer.
6. After you have turned on Bluetooth, the Bluetooth icon appears in the status bar .

Alternatively, you can also work with the status bar directly:

1. Scroll down the status bar.
2. Tap on **Settings** .
3. Activate Bluetooth as above described.

FURTHER BLUETOOTH™ SETTINGS

You can change the name of your device, set the timeout for the visibility or display obtained data.

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks > Bluetooth** or alternatively wipe the status bar down and tap on  **Settings > Bluetooth**.
3. Tap on the **menu key**.
4. Choose between **Rename phone**, **Visibility timeout**, and **Show received files** (you need to turn on Bluetooth for some settings).
5. Make your adjustments.



NOCTICE: Bluetooth™ is turned off by default. Turn Bluetooth™ off when not using it to save power. Also turn it off in places where it is prohibited to use Bluetooth™ (e.g. in airplanes or hospital).

PAIRING WITH OTHER DEVICES

You can use your phone with other Bluetooth™ devices such as a Bluetooth™ headset or a Bluetooth™ hands-free. For the pairing of the devices you may need a password. You can find this one in the documentation of the device to be paired. This password is only needed one time. Once you have paired with a device you do not need to enter the password again. Otherwise your phone automatically uses the general password “0000”.

PAIR DEVICES

1. Make sure that both phones do have turned on Bluetooth and that both are visible to other devices.
2. Tap the **menu key** on the home screen.
3. Tap on **System settings > Wireless & Networks > Bluetooth** or alternatively wipe down the status bar > and tap on **Settings**  > **Bluetooth**. All available devices will be displayed.
4. Tap on the device you want to pair with.
5. If prompted enter the password or configure the same password on both devices.
6. Tap on **Pair**. The devices are now paired.

UNPAIR DEVICES

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks > Bluetooth** or alternatively wipe down the status bar and tap on **Settings**  > **Bluetooth**.
3. Choose the paired device you want to unpair and tap on the menu .
4. Tap on **Unpair**.

SEND AND RECEIVE FILES

You can send and receive files via Bluetooth™, such as photos, audio files, contacts or websites.

SEND FILES VIA BLUETOOTH

1. Receiving device: make sure Bluetooth™ is enabled and visible for others.
2. Sending device: Open the object you want to send.
3. Depending from the application from which you want to send the item you need to either touch the object and hold or press the **menu key** to send the item. Maybe there are other sending methods as well.
4. Select the item and tap on **Share, Send** or **Forward** (icon) and tap on **Bluetooth™**.
5. If prompted to use Bluetooth™ service tap on **Turn on**.
6. Tap on the name of the device you want to send the item to.
7. Receiving device: if prompted accept the connection.
8. Receiving device: If prompted confirm the file by tapping on **Accept**.

SHOW RECEIVED ITEMS

1. Tap the **menu key** on the home screen.
2. Tap on **System settings > Wireless & Networks > Bluetooth** or alternatively wipe down the status bar and tap on **Settings**  > **Bluetooth**
3. Tap on the **menu key** and tap on **Show received files**.

CAMERA

TO TAKE PHOTOS AND VIDEOS

You can capture photos and videos with the build-in camera. You can send those via MMS to friends or upload to other Web Services. The phone also has a front camera that lets you take selfies or hold conference calls easily.

CAMERA FUNCTIONS



Number	Function
①	Take photo / video (in video mode this icon is red)
②	Photo / video mode
③	View photos / videos
④	Camera settings
⑤	Effect
⑥	Shot Mode
⑦	Flash Mode
⑧	Switch between front and back camera

OPEN CAMERA APP

Tap on the **Camera** app on the home screen. The screen orientation changes when you rotate the device in different directions.

CLOSE CAMERA APP

Tap on the home key or retrun key.

TAKE PHOTO

1. Tap on the **Camera** app.
2. Tap on ② **Photo mode**.
3. Aim the camera at the subject.
4. Tap on ① **Take photo**.



NOTICE: Keep the device vertically for portraits and horizontally for landscape images.

TAKE VIDEO

1. Open the **Camera** app.
2. Tap on ② **video mode**.
3. Aim the camera at the subject.
4. Tap on ① **Take video**, to start the recording.
5. Tap again on ①, to stop the recording.

TAKE A SELFIE

1. Open the **Camera** app.
2. Tap on ⑧ **Switch between front and back camera**.
3. Keep the camera pointed at yourself.
4. Tap on ① **Take photo**, to take a selfie.

VIEW PHOTOS OR VIDEOS

1. Open the **Camera** app.
2. Tap on ③ **View photos / videos**.
3. Swipe to the left or right to scroll through your photos / videos.

DELETE PHOTOS OR VIDEOS

1. Open the **Camera** app.
2. Tap on ③ **View photo / video**.
3. Select the photo / video you would like to delete.
4. Tap on the picture. You will get a menu bar at the top.
5. Tap on .
6. Confirm with **OK**.

CAMERA SETTINGS PHOTO MODE

Following camera settings can be set before you take a photo.

CAMERA SETTINGS

1. Tap on the **Camera** app.
2. Tap on **② Photo mode**.
3. Tap on **④ Camera settings**.
4. Select the setting you want to adjust and make the appropriate changes for:
 - Wavelet Denoise
 - Location Info
 - Silent Mode
 - Storage Location
 - Timer
 - Volume Key
 - Picture Size
 - Face Detection
 - Picture Quality
 - Focus Mode
 - Touch AF
 - Scene Mode
 - Intelligence Settings

SET COLOR EFFECT

1. Open the **Camera** app.
2. Tap on **② Photo mode**.
3. Tap on **⑤ Color Effect**.
4. Select an effect by tapping on it.

SET SHOT MODE

1. Open the **Camera** app.
2. Tap on **② Photo mode**.
3. Tap on **⑥ Shot mode**.
4. Choose between **Normal shot**, **Zero Shutter**, **Panorama**, **Continue Mode**, **HDR** and **Anti-Shake**.

SET FLASH

1. Open the **Camera** app.
 2. Tap on **② Photo mode**.
 3. Tap on **⑦ Flash mode**.
 4. Choose between **Auto**, **On** and **Off**.
- You can turn on the flash when taking pictures with low light conditions. Sometimes the pictures quality, even in poor light is better without flash.

Auto: The camera automatically detects whether a flash is needed or not. **Auto** is set as default.


On: You can use the flash when the background is brighter than your subject.

Off: The flash is turned off.

EDIT PHOTO

You can edit your photos after recording.

OVERVIEW PHOTO EDITING

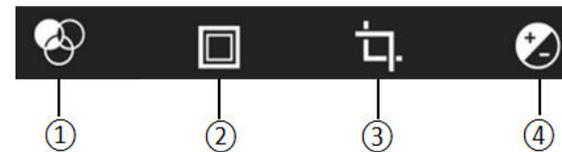

Number	Functions
①	Filters
②	Frames
③	Crop / Straighten / Rotate / Mirror / Draw
④	Color adjustments

ROTATE PHOTO

1. Open the **Camera** app.
2. Tap on **③ View photos / videos**.
3. Swipe to the left or right to scroll through your photos / videos.
4. Tap on the **menu key**.
5. Select **Rotate left** or **Rotate right**. The photo rotates into the direction you selected.

CROPPING PHOTO

1. Open the **Camera** app.
2. Tap on **③ View photos / videos**.
3. Swipe to the left or right to scroll through your photos / videos.
4. Tap on the **menu key** and tap on **Edit > Crop**.
5. Tap on . You will see a frame with 4 fixing points.
6. Press and hold a fixing point and drag it into the desired cropping direction.

7. After created the desired cut for your picture, tap on . If you do not want to make the change, tap on .

SET PICTURE AS

1. Open the **Camera** app.
2. Tap on **3 View photos / videos**.
3. Swipe to the left or right to scroll through your photos / videos.
4. Tap on the **menu key**.
5. Tap on **Set picture as**.
6. Select an application and follow the steps.

CAMERA SETTINGS VIDEO MODE

Following camera settings can be set before you make a video.

CAMERA SETTINGS

1. Open the **Camera** app.
2. Tap on **2 Video mode**.
3. Tap on **4 Camera settings**.
4. Select the settings you want to adjust and make the appropriate changes for:
 - Location info
 - Silent Mode
 - Video quality: HD, WVGA, SD, VGA
 - HD-Format:** 16:9 (1280x720 Pixels)
 - WVGA-Format:** 5:3 (800x480 Pixels)
 - SD-Format:** 16:9 (720:480 Pixels)
 - VGA-Format:** 4:3 (640x480 Pixels)

SET COLOR EFFECT

1. Open the **Camera** app.
2. Tap on **2 Video mode**.
3. Tap on **5 Color Effect**.
4. Select a setting you want to adjust and make the appropriate changes.

SET RECORDING MODE

1. Open the **Camera** app.
2. Tap on **2 Video mode**.
3. Tap on **6 Recording mode**.
4. Choose between **Normal Recording** and **MMS Recording**.

SET FLASH MODE

1. Open the **Camera** app.
2. Tap on **2 Video mode**.
3. Tap on **7 Flash mode**.
4. Choose between **On** and **Off**.

You can turn on the flash when taking pictures with low light conditions. Sometimes the pictures quality, even in poor light is better without flash.

On: You can use the flash when the background is brighter than your subject.

Off: The flash is turned off. **Off** is set as default.

GALLERY

You can view your videos or photos on the gallery app and share them with others or set as wallpaper or caller image. An appropriate selection appears when you tap on the menu button while you are in the gallery app.

- **ALBUMS:** shows all photos and videos that have been recorded with this device.
- **LOCATION:** shows all photos and videos with location indicator. Only those items will be shown where the function **Location info** has been enabled.
- **TIMES:** shows all photos and videos in chronological order of recording.

OPEN & CLOSE GALLERY

1. Tap on the **Gallery** app.
2. To close gallery tap on the home or back key.



NOTICE: If the screen rotation does not change automatically when turning sideways, please select **Auto-rotate screen** in the display settings.

PHOTOS & VIDEOS

Your photos and videos can be displayed as thumbnails in a grid view.

SHOW / PLAY ITEMS

1. Tap on the **Gallery** app.
2. Tap on **Albums**. All photos and videos are displayed in the appropriate category (camera, screenshot, images from e-mail or images from other application).
3. Tap on the thumbnail version of the category to view the photos in this category. Videos are marked with the play icon (arrow). Swipe left or right to view all thumbnail images.
4. Tap a picture or video to view or play it.
5. Swipe to the left to view the next item and to the right to view the previous one.

WORKING WITH PHOTOS

You can edit your photos for example to prune them, to assign to contact pictures or to use them as wallpaper.

Zoom photos

If you double tap on a picture the zoom will be activated. Repeat this command to disable zoom again. Alternatively, drag two fingers apart to enlarge the image and pull the fingers together again to zoom back out.

View photos in slide show

1. When viewing a photo, tap on the **menu key**.
2. Tap on **Slideshow**, to reproduce all photos in this album.
3. To exit, tap a photo.

Edit photos

1. Select the photo you want and tap on it. A menu bar will appear at the top.
2. Tap on . A menu bar will appear at the bottom.
3. You now will have the same edit possibilities as described in chapter "Camera / Edit photo".

Rotate photos

1. Select the photo you want to rotate.
2. Tap on the **menu key**.
3. Tap on either **Rotate left** or **Rotate right**.

Crop a photo

1. Select the photo you want to crop.
2. Tap on the **menu key**.
3. Tap on **Crop**. You will see a blue frame. Pull the marker points either to reduce or to enlarge the image section and thus to cut it.
4. Confirm with **OK**.

Set photo as

1. Select a photo.
2. Tap on the **menu key**.
3. Tap on **Set picture as**.
4. You can now select from the displayed applications (such as contact picture or set as wallpaper). Now follow the appropriate steps.

Delete photos

1. Select the photo you want to delete.
2. Tap on **Delete**.
3. Confirm with **OK**.

Share photo

1. Select the photo you want to share.
2. Tap on  and select the application with which you want to forward your image. Now follow the appropriate steps.



NOTICE: Make sure that you are connected to the online service you want to use. Otherwise, this application will not be displayed.

WORKING WITH VIDEOS

You can download your recorded videos or forward it to friends by uploading them to online services.

Play video

1. Open the album containing the video you want to play.
2. Select the video you want to play and tap on it.
3. Tap on  to start playing the video.

Stop video

1. While playing the video tap the screen to display the controls.
2. Tap on  to stop the video.

Rewind back / fast forward

1. While playing the video tap the screen to display the controls.
2. Drag the **progress bar** to fast forward to the right and to the left to rewind.

Share video

1. Select the video you want to share.
2. Tap the screen to display the toolbar, if not already open.
3. Tap on  and select the application with which you want to forward the video. Now follow the appropriate steps.



NOTICE: Some objects may exceed the maximum file size and therefore can not be sent for transmitted.

Make sure that you are connected to the online service you want to use. Otherwise, this application will not be displayed.

GROUP PHOTOS & VIDEOS

1. Tap the **menu key** while you are in the albums thumbnail view.
2. Tap on **Select album***.
3. Select the photos and videos you want to group. Selected items are marked with a checkmark.
4. Use the toolbar to work with the selected items (e.g. share with others or Delete all).



***NOTICE:** Alternatively, you also can touch the item / items and hold to mark them with the checkmark.

MULTIMEDIA

MUSIC APP

You can transfer your music or audio books from your computer to your smartphone and play them. Also purchased online and downloaded music/ audio books easily can be listened and arranged.

FUNCTIONS



Number	Function
1	Open Playlist
2	Shuffle
3	Playback options: - Repeating all songs - Repeating current song - Repeat is off
4	Equalizer settings
5	Song information (Interpreter / Album / Titel)
6	Go to the previous song of current playlist
7	Play or Pause
8	Go to the next song of current playlist
9	Elapsed time of current song
10	Total time of current song
11	Progress bar

PLAY MUSIC

Play track

1. Tap on the **Music** app.
2. In the tab **Songs**, tap on the title you want to play.

Change track

Select function number 6 or 8 while the song is being played to play the previous or next one.

Stop track

Tap on function number 7.

Rewind back / fast forward music

1. Tap anywhere on the progress bar 11 or
2. Drag the progress bar to the left or to the right .

Shuffle

You can shuffle songs either in a playlist or album.

1. Tap on **Playlist** or **Album**.
2. Select the playlist or album that should be played in random order.
3. Tap the **menu key** and select **Shuffle all**.
4. Tap on function number 2 to disable the shuffle.

Improve the sound quality

1. While playing a track tap on function number 4.
2. Tap on the **power** button on the top-right.
3. Tap on **Custom** and pull the frequency band slider up or down for manual adjustment or
4. Select a music style from the list of automatic adjustments.

Minimize music app

1. Tap the **back key** to return to the previous screen.
2. Tap the **home key** to open the homescreen. The track continues in the background.

Activate music app

Drag the status bar downwards to open the notification panel.

Delete track

1. While playing a track tap on the **menu key**.
2. Tap on **More**.
3. Tap on **Delete**.

MANAGE PLAYLISTS

You can create playlists directly on your device.

Open playlist

1. Tap on the **Music** app.
2. Tap on **Playlists**.
3. Tap the playlist you want to play.

Add track to Playlist

1. While playing a track tap on the **menu key**.
2. Tap on **Add to playlist**.
3. Choose between **Current playlist** and **New** (a new playlist will be created).
4. If you selected **New** type in the name for the new playlist when prompted and tap on **Save**.

Delete track

1. Press and hold a track to delete it from the playlist.
2. Tap on **Delete**.
3. Confirm with **OK**.

USE AS YOUR RINGTONE

1. While playing a track tap on the **menu key**.
2. You can now choose between **Use as ringtone 1** (for SIM card 1) or **Use as ringtone 2** (for SIM card 2).

COPY MUSIC TO SD CARD

1. Connect your device with a USB cable to your computer to enable the USB memory.
2. Create a new folder on the microSD card.
3. Copy your music into the new folder.
4. After you copied the music, remove or quit from disk drive and then safely remove the phone.
5. Disconnect your device from the PC.

WARNING: To prevent possible hearing damage, do not listen at high volume levels for long periods. Permanent hearing loss may occur if the receiver, headphones, speakerphone, or earpieces are used at high volume. To protect you from damage, you will get a warning on your device if the music is too loud.

CLOSE MUSIC APP


1. While playing a track tap on the menu key.
2. Then tap on **More > End**.

RADIO APP

You can use the pre-installed radio app as traditional FM radio on your device. You can search for stations, listen to them or save as favorite.

To use the radio a headset are needed as they serve as an antenna. You can then listen to the sound via speaker.

FUNCTIONS

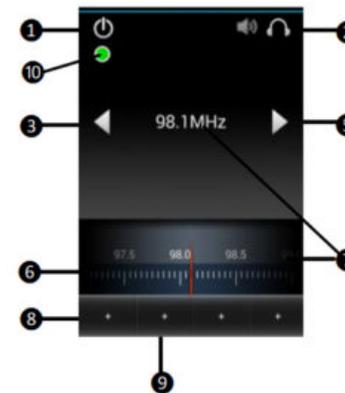

Number	Function
1	ON / OFF radio
2	Switch between headphones and speaker
3	Scroll back in the frequency range
4 7	Set frequency
5	Next in the frequency range
6	Frequency bar
8	Favorites
9	Tune a station as favorite
10	Record button

START RADIO APP

1. Connect your headset or headphones to your device.
2. Tap on the **FM Radio** app.

3. The available radio stations are displayed when tapping on  or .

SWITCH BETWEEN THE STATIONS

Slide your finger along the **frequency bar**  or tap on  or .

SELECT RADIO RANGE

1. Tap the **menu key** when radio app is open.
2. Tap on **Settings**.
3. Tap on **Regional Band**.
4. Select an option.

SET UP FAVORITES

1. Search the station you want to save as favorite.
2. Press and hold „+“ () in Favorites (). Station will be saved and displayed in the favorites bar.

EDIT FAVORITES

1. Press and hold the present station in the favorites bar till a menu appears.
2. Select **Delete**, to remove station from Favorites.
3. Select **Rename**, to rename the station with a own chosen name.
4. Select **Replace**, to replace this station with another one.
5. Select **Tune**, to adjust the station (if there are any problems with the transmission).

MONO AND STEREO PLAYBACK

Your radio app has got a mono and stereo playback. In some cases, the mono-mode lead to a reduction of the noise or to improve the sound quality.

1. Tap the **menu key** when radio app is open.
2. Tap on **Settings**.
3. Tap on **Audio Output Mode**.
4. Select by tapping either **Stereo** or **Mono**.

VIDEO PLAYER

Use the video player app to play movies and other video files that are stored on your phone.

PLAY VIDEOS

1. Tap on the **Videos** app.
2. Tap on video you want to play.
3. You can either hide or open the controls by tapping the screen.
4. To stop the video tap on .
5. To play the video again tap on .
6. To rewind, drag the progress bar to the left to fast forward to the right.

SHARE VIDEO

1. Tap on the **Videos** app.
2. Press and hold the vide you want share until a menu appears.
3. Tap on and select the app with which you want to forward / share the video. Now follow the appropriate steps.

DELETE VIDEO

1. Tap on the **Videos** app.
2. Press and hold the video you want to delete until a menu appears.
3. Tap on **Delete** and confirm with **OK**.

OTHER APPLICATIONS

CALENDAR

You can use the calendar app to enter events or personal appointments. If you have a Google™ account, you can synchronize your device calendar with your web calendar.

SET CALENDAR VIEW

1. Tap on the **Calendar** app.
2. Tap the top left to select an option: **Day**, **Week**, **Month** or **Agenda**.

SHOW SEVERAL CALENDARS

1. Tap on the **Calendar** app.
2. Tap on the **menu key** to select **Calendars to display**.
3. Select a calendar.



NOTICE: Your Google™ account previously must have been synchronized to see this calendar in the selection.

CREATE EVENT

1. Tap on the **Calendar** app.
2. Tap on the **menu key** to select **New event**.
3. Enter the event name, location and date / time of the appointment. You also can do other adjustments like set reminders or repetition.
4. Confirm with **Done**.

VIEW AND EDIT EVENT

1. Tap on the **Calendar** app.
2. Tap on the event you would like to view or edit.
3. Tap on  to edit the event.
4. Make your adjustments and tap on **Done**.

CHANGE CALENDAR SETTINGS

1. Tap on the **Calendar** app.
2. Tap on the **menu key** and then on **Settings**.
3. Make your adjustments in **General settings**.

CLOCK

You can use your device as an alarm clock, stop watch or countdown.

The alarm will ring also if your device is muted.

ALARM CLOCK

Open and set alarm clock

1. Tap on the **Clock** app.
2. Tap on **Alarm**  and tap on .
3. Set the alarm time and tap on **Done**.
4. If necessary, edit the alarm settings (repeat, ringtone, vibrates).

Disable alarm

1. Tap on the **Clock** app.
2. Tap on **Alarm**  and select the alarm.
3. Deactivate the alarm to **OFF** (bar turns from blue to grey).

Edit alarm settings

1. Tap on the **Clock** app.
2. Tap on **Alarm**  and select the alarm.
3. Tap on the alarm, make your adjustments and confirm with **Done**.

Delete alarm

1. Tap on the **Clock** app.
2. Tap on **Alarm**  and select the alarm.
3. Tap on  to delete the alarm.
4. If you want to undo the deletion, tap on **UNDO**.

Set ringtone for alarm

1. Tap on the **Clock** app.
2. Tap on **Alarm**  and select the alarm.
3. Tap on the tone symbol to select ringtone or music for the alarm.
4. Tap on **OK**.
5. Select a ringtone or music for the alarm and confirm with **OK**.

Set repeat alarm

1. Tap on the **Clock** app.
2. Tap on **Alarm**  and select the alarm.
3. Activate the checkbox **Repeat**.
4. Make your selection.

Enable vibration

1. Tap on the **Clock** app.
2. Tap on **Alarm**  to select an alarm.
3. Activate the checkbox **Vibrate**.

Turn off ALARM

When alarm rings

1. Slide  to **Dismiss**, to turn off the alarm.
2. Slide  to **Snooze**, to put the alarm in snooze mode. A new alarm will sound after 10 minutes (default setting) or the selected snooze duration.

Snooze alarm

1. Tap on the **Clock** app.
2. Tap on **Alarm** .
3. Tap on the menu  > **Settings** > **Snooze length**.
4. Select an option.
5. Confirm with **OK**.

STOP WATCH


1. Tap on the **Clock** app.
2. Tap on **StopWatch** .
3. Tap on **START** to start stopping the time.
4. Tap on **STOP** to stop.
5. Tap on  to add an intermediate result. You can tap loop as many times as you like.

COUNTDOWN

1. Tap on the **Clock** app.
2. Tap on **Countdown** .
3. Set the time and tap on **START** to start countdown. Tap on **STOP** to stop and on **START** to continue again.
4. Tap on  to reset the countdown.

SOUND RECORDER

FUNCTIONS

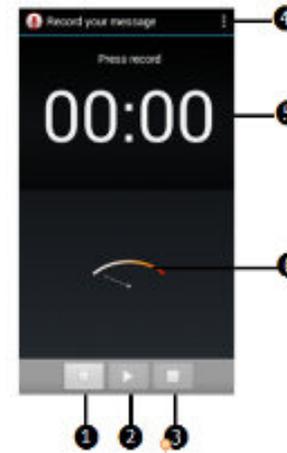

Number	Functions
1	Start/pause recording
2	Play
3	Stop recording
4	Recording setting
5	Recording time
6	Recorder pointer

RECORDING

1. Tap on the **Sound Recorder** app.
2. Keep your phone's microphone near your mouth.
3. Tap on 1 2 to start or pause the recording.
4. Tap on 3 to finish the recording. It will be saved automatically.
5. Tap on 2 to play the recording.

CALCULATOR

The device does have a calculator app with which you can perform simple calculations comfortably.

USE CALCULATOR

1. Tap on the **Calculator** app.
2. Use the calculator app like an ordinary calculator.

3. To perform advanced mathematical arithmetic tap on the **menu key > Advanced panel**.
4. To return to the basic functions tap on the menu key > **Basic panel**.

CLOSE CALCULATOR

Tap on the home key to close the calculator app.

TROUBLESHOOTING

When using the phone, you may come into some troubles. Here are some tips to solve the problem.

No signal

- ◆ Wait about two minutes after turning on the phone
- ◆ You may lose signal in elevators or tunnels. Move your phone to an open area.
- ◆ You may be in a service area gap. The phone will receive signal after entering a service area.

Forget security PIN or PUK?

Contact your retailer or service provider for lost PIN, PUK or other passwords.

Can't dial after entering phone number?

- ◆ Make sure to press dial button
- ◆ Make sure you have not set call restrictions.

Call failure to a contact?

- ◆ Make sure the phone number is saved correctly in your address book.
- ◆ If needed, reenter and save the number.

Can't be heard by the other side during a call?

- ◆ Make sure your speaker is not covered.
- ◆ Make sure to hold the speaker near your mouth.
- ◆ Make sure the correct usage of the headset.

Poor call quality

- ◆ Make sure the internal antenna is not blocked.
- ◆ The phone may lose receiving function where the signal is weak.
- ◆ Please try another place.

Have trouble with battery charging or the phone turns off when charging?

- ◆ Remove the phone from the charger, then reinstall and recharge the battery.
- ◆ Battery electrodes may be contaminated. Wipe the three gold touch points with a soft cloth and try to charge the battery again.
- ◆ If the battery can't be fully charged, dispose the old battery

properly and change a new battery.

The phone is hot

When you open several apps at a time, the large power needed may cause hotness. As in such case, no worry for – it causes no influence on the operating time or performance of the phone.

Your phone can't connect to internet?

- ◆ Make sure you enter effective internet service provider settings.
- ◆ Make sure you are connected to a Mobile Service Providers wireless network and an unimpeded signal.

You phone can't pair with another Bluetooth device?

- ◆ Make sure both Bluetooth functions are enabled.
- ◆ Make sure the distance between the two devices is beyond effective range not blocked by wall or other obstacles.
- ◆ Make sure each device is visible.
- ◆ Make sure the two devices are compatible with Bluetooth wireless technology.
- ◆ Make sure to enter correct passwords on both devices.

Can't listen to music by remote Bluetooth headset?

- ◆ Make sure the phone is connected to the headset.
- ◆ Make sure the music format you are trying to listen to is supported by the headset.
- ◆ Make sure the distance between the headset and the device is beyond effective range of Bluetooth device and not blocked by walls or other obstacles.

PHICOMM
(· YOUR PORTAL TO SMART LIFE ·)

